



Technology for Vacuum Systems

**Instructions for use**



**ME 4C NT VARIO  
MZ 2C NT VARIO  
MD 4C NT VARIO  
MV 10C VARIO-B  
MD 12C VARIO-B**

**PC 3002 VARIO  
PC 3003 VARIO  
PC 3004 VARIO  
PC 3010 VARIO  
PC 3012 VARIO**

**Speed controlled chemistry diaphragm pumps  
and chemistry pumping units  
without controller (o.C.)**

Dear customer,

Your VACUUBRAND diaphragm pumps should support you for a long time without trouble and with maximal power. Thanks to our long practical experience we have much information how you could ensure powerful application and personal safety. Please read these instructions for use before the initial operation of your pump.

VACUUBRAND diaphragm pumps are the result of many years of experience in construction and practical operation of these pumps combined with the latest developments in material and manufacturing technology.

Our quality maxim is the "zero fault principle":

Every diaphragm pump, leaving our company, is tested intensively including an endurance run of 18 hours. Therefore also faults, which occur rarely, are identified and can be eliminated immediately.

The achievement of the specifications after the endurance run is tested for every pump.

**Every VACUUBRAND pump achieves the specifications. We feel obliged to this high quality standard.**

We know that the vacuum pump can not take a part of your real work and hope that our products contribute to an effective and trouble-free realisation of your work.

Yours

VACUUBRAND GMBH + CO KG

After sales service: Contact your local dealer or call +49 9342 808-193.



➔ Danger! Immediate danger. Death or severe injuries as well as damage to equipment and environment can occur.



⚠ Warning! Possible danger. Severe injuries as well as damage to equipment and environment can occur.



• Caution! Possible danger. Slight injuries as well as damage to equipment and environment can occur.



Note. Disregarding of notes may cause damage to the product.



Caution! Hot surface!



Isolate equipment from mains before removing the cover.

# Contents

<b>Safety information!</b> .....	<b>4</b>
General information.....	4
Intended use.....	4
Setting up and installing the equipment .....	4
Ambient conditions .....	5
Operating conditions .....	6
Safety during operation .....	6
Maintenance and repair.....	8
<b>Technical data</b> .....	<b>9</b>
Gas inlet temperatures .....	13
Wetted parts .....	14
Pump parts .....	15
<b>Use and operation</b> .....	<b>20</b>
Attention: Important notes regarding the use of gas ballast .....	23
Shutdown .....	24
<b>Accessories</b> .....	<b>25</b>
<b>Troubleshooting</b> .....	<b>26</b>
<b>Replacing diaphragms and valves</b> .....	<b>27</b>
Cleaning and inspecting the pump heads (pumps NT VARIO / PC 300x VARIO).....	28
Replacing the diaphragm .....	31
Replacing the valves .....	32
Cleaning and inspecting the pump heads (pumps VARIO-B / PC 301x VARIO).....	35
Replacing the diaphragm .....	38
Assembling the pump heads .....	39
Replacing the valve at the distributor (outlet side) .....	40
Assembling the connecting hoses .....	40
Replacing the device fuse .....	42
<b>Notes on return to the factory</b> .....	<b>43</b>
<b>Health and safety clearance form</b> .....	<b>44</b>

# Safety information!

## General information

**To operate the pump / the pumping unit, a VACUUBRAND controller CVC 3000 or VNC 2 is required!**

### NOTICE

☞ **Read and comply with this manual before installing or operating the equipment.**

☞ Transport the pump at the provided handles or recessed grips.

Remove all packing material, remove the product from its packing-box, remove the protective covers from the inlet and outlet ports and keep. Inspect the equipment.

If the equipment is damaged, notify the supplier and the carrier in writing within three days; state the item number of the product together with the order number and the supplier's invoice number. Retain all packing material for inspection.

**Do not use the equipment if it is damaged.**

If the equipment is not used immediately, replace the protective covers. Store the equipment in suitable conditions.

## Intended use

### WARNING

☞ The pump and all system parts are not to be used on humans or animals.

☞ Prevent any part of the human body from coming into contact with vacuum.

☞ Make sure that the individual components are only connected, combined and operated according to their design and as indicated in the instructions for use.

☞ Comply with notes on correct vacuum and electrical connections, see section "Use and operation".

### CAUTION

- The pumps are designed for **ambient temperatures** during operation between +10°C and +40°C. Check the maximum temperatures if installing the pump in a cabinet or a housing and make sure ventilation is adequate. Install an external automatic ventilation system if necessary. If pumping hot process gases make sure that the maximum permitted gas inlet temperature, which depends on several parameters like inlet pressure or ambient temperature (see "Technical data"), is not exceeded.
- Particles and dust must not be aspirated.

### NOTICE

Use the equipment **for the intended use only**, i.e. for generation, measurement and control of vacuum in vessels designed for that purpose.

## Setting up and installing the equipment

### DANGER

➤ Equipment must be connected only to a **suitable electrical supply** and a suitable earth point. Failure to connect the motor to ground may result in deadly electrical shock.

The supply cable may be fitted with a moulded European IEC plug or a plug suitable for your local electrical supply. If the plug has been removed or has to be removed, the cable will contain wires colour coded as follows: green or green and yellow: earth; blue or white: neutral; brown or black: live.

**WARNING**

- ☞ Due to the high compression ratio of the pumps, pressure at the outlet port might be generated being higher than the maximum permissible pressure compatible with the mechanical stability of the system.
- ☞ Do not permit any **uncontrolled pressurizing** (e. g. make sure that the exhaust pipeline cannot become blocked). If you have an exhaust isolation valve, make sure that you cannot operate the equipment with the valve closed. **Risk of bursting!**
- ☞ Provide always a free and pressureless exhaust pipeline.
- ☞ Ensure that the system design does not allow the coolant outlet pipeline to become blocked. Install an optional coolant valve always in the supply line of the exhaust waste vapour condenser only.
- ☞ Check the overpressure safety relief device at the exhaust waste vapour condenser in appropriate intervals.

**CAUTION**

- Comply with **maximum permissible pressures** at inlet and outlet and pressure differences between inlet and outlet, see section "Technical data". Do not operate the pump with overpressure at the inlet.
- Check that mains voltage and current conform with the equipment (see rating plate).
- Avoid overpressure of more than 0.2 bar in case inert gas is connected.
- Connect pipes gas tight at inlet and outlet of the pump.
- Secure coolant hoses at the hose nozzles (e.g. with hose clip) to prevent their accidental slipping.
- **Attention:** Flexible elements tend to shrink when evacuated.

**NOTICE**

Provide a firm level platform for the equipment and check that the system to be evacuated is mechanically stable and that all fittings are secure. Ensure a stable position of the pump without any mechanical contact except of the pump feet. Comply with all applicable safety regulations.

Keep a distance of minimum 20 cm between fan and ambient parts (e.g. housing, walls, ...). Check fan regularly for dust/dirt, clean if necessary to avoid a cutback of ventilation.

If the equipment is brought from cold environment into a room for operation, allow the equipment to warm up (pay attention to water condensation on cold surfaces).

The diameter of the inlet and outlet pipeline should be at the least as large as the diameter of the pump connection pipelines.

Comply with all **applicable and relevant safety requirements** (regulations and guidelines), **implement the required actions and adopt suitable safety measures**.

**Ambient conditions****NOTICE**

To the best of our knowledge the equipment is in compliance with the requirements of the applicable EC-directives and harmonized standards (see "Declaration of conformity") with regard to design, type and model. Directive IEC 1010 gives in detail conditions, under which the equipment can be operated safely (see also IP degree of protection). Adopt suitable measures in case of differences, e. g. using the equipment outdoors, installation in altitudes of more than 1000 m above mean sea level, conductive pollution or bedewing.

Pay attention to the **permissible maximum ambient and gas inlet temperatures** (see "Technical data").

### Operating conditions



➔ The pumps have no approval for operation in or for pumping of potentially explosive atmospheres.

- ➔ The pumps are **not suitable** to pump
- **unstable substances**,
  - substances which react explosively under **impact** (mechanical stress) and/or when being exposed to **elevated temperatures** without air.
  - **self inflammable** substances,
  - substances which are inflammable without air and
  - **explosive substances**.



- The pumps are **not suitable** for pumping substances which may form **deposits** inside the pump. Deposits and condensate in the pump may lead to increased temperatures even to the point of exceeding the maximum permitted temperatures!
- If there is a danger of **deposits** in the pump chamber (check inlet and outlet of the pump), inspect the pump chambers regularly and clean if necessary.
- The pumps are **not suitable** for pumping dust and have **no approval** for operation below ground.



If pumping **different substances**, it is recommended to purge the pump with air or inert gas prior to changing the pumped media in order to pump out residues and to avoid reactions of the pumped substances with each other and with the pump materials.

**Take into consideration interactions and chemical reactions of the pumped media.** Ensure that the materials of the **wetted parts** are compatible with the pumped substances, see section "Technical data".

### Safety during operation



➔ Adopt suitable measures to prevent the release of dangerous, toxic, explosive, corrosive, noxious or polluting fluids, vapours and gases. In case install an appropriate collecting and disposal system and take protective action for pump and environment.

➔ Prevent any part of the human body from coming into contact with vacuum.

➔ The user must take suitable precautions to prevent any formation of explosive mixtures in the expansion chamber or at the outlet. In case of e.g. a diaphragm crack, mechanically generated sparks, hot surfaces or static electricity may ignite these mixtures. Use inert gas for gas ballast or venting if necessary.

➔ Potentially explosive mixtures at the outlet of the pump have to be drained appropriately, sucked off or diluted with inert gas to non-explosive mixtures.



☞ Pay attention to the symbol "hot surfaces" on the equipment. Adopt suitable measures to prevent any danger arising from the formation of hot surfaces or electric sparks. Provide a suitable protection against contact if necessary.



☞ Ensure that the exhaust pipeline is always free and pressureless.

☞ Ensure that the coolant outlet pipeline at the exhaust waste vapour condenser is always free and that the coolant can flow off unobstructedly.

- ☞ Pumping at high inlet pressure may lead to overpressure at the gas ballast valve.  
Pumped gases or condensate might be pushed out in case the valve is open. If an inert gas supply is connected, ensure that the inlet pipeline is not contaminated.

## CAUTION

- Comply with applicable regulations when disposing of chemicals. Take into consideration that chemicals may be polluted.  
Take adequate precautions to protect people from the effects of dangerous substances (chemicals, thermal decomposition products of fluoroelastomers), wear appropriate safety-clothing and safety glasses.
- Check the overpressure safety relief device at the exhaust waste vapour condenser in appropriate intervals.
- Use only **genuine spare parts and accessories**. Otherwise safety and performance of the equipment as well as the electromagnetic compatibility of the equipment might be reduced. Possibly the CE mark or the C/US conformity becomes void if not using genuine spare parts.

## NOTICE

Do not start the pump if the pressure difference between inlet and outlet port exceeds 1.1 bar at maximum.

Prevent the backpressure of gases and the backflow of condensates. Never suck liquids or dust into the pump.

Check liquid level in both catchpots regularly and drain condensate in time. In case, install level sensor (see "Accessories").

Provide appropriate protective measures (i.e. precautions which allow for the requirements of the respective application) even for the case of failure and **maloperation mode**.

Failure of the pump (e.g. due to power failure) or of connected components, parts of the supply or change of parameters must not lead to a critical dangerous situation under any circumstances. In case of diaphragm cracks or leaks in the manifold pumped substances might be released into the environment or into the pump housing or motor. Comply especially with notes on operation and use and maintenance.

Due to the residual **leak rate of the equipment**, there might be an exchange of gas, albeit extremely slight, between the environment and the vacuum system. Adopt suitable measures to prevent contamination of the pumped substances or the environment.

In case of overload the motor is shut down by a **thermal cutout** in the winding. Attention: Reset possible only manually. Switch off the pump or isolate the equipment from mains. Identify and eliminate the cause of failure. Wait approx. five minutes before restarting the pump.

The A-weighted emission sound pressure level of the pump does not exceed 70 dB(A). Measurement according to EN ISO 2151:2004 and EN ISO 3744:1995 with standard silencer or exhaust tube at outlet.



## Maintenance and repair

### NOTICE



**Wear parts have to be replaced regularly.** In case of normal wear the lifetime of the diaphragms and valves is > 10000 operating hours. Bearings have a typical durability of 40000 h.

- **Isolate equipment from mains and wait two minutes** before starting maintenance to allow the capacitors to discharge.

### WARNING

⚠ **Ensure that the pump cannot be operated accidentally. Never operate the pump if covers or other parts of the pump are disassembled. Never operate a defective or damaged pump.**

⚠ **Attention:** The pump might be contaminated with process chemicals which have been pumped during operation. Ensure that the pump is decontaminated before maintenance and take adequate precautions to protect people from the effects of dangerous substances if contamination has occurred.

### CAUTION

- Before starting maintenance vent the pump, isolate the pump and other components from the vacuum system. Allow sufficient cooling of the pump. Drain condensate, if applicable.

Ensure that **maintenance** is done only by suitably trained and supervised technicians. Ensure that the maintenance technician is familiar with the safety procedures which relate to the products processed by the pumping system.

In order to comply with law (occupational, health and safety regulations, safety at work law and regulations for environmental protection) vacuum pumps, components and measuring instruments returned to the manufacturer can be repaired only when certain procedures (see section "**Notes on return to the factory**") are followed.



## Technical data

The pump achieves its ultimate pumping speed and ultimate vacuum only at operating temperature (after approx. 15 min.).

Type		ME 4C NT VARIO o.C.	MZ 2C NT VARIO o.C.	MD 4C NT VARIO o.C.
Maximum pumping speed (ISO 21360)	m <sup>3</sup> /h	4.9	2.8	4.6
Ultimate vacuum (absolute) without gas ballast	mbar	70	7	1.5
Ultimate vacuum (absolute) with gas ballast	mbar	-	12	3
Maximum permissible inlet pressure (absolute)	bar	1.1		
Maximum permissible outlet pressure (absolute)	bar	1.1		
Maximum permissible pressure (absolute) at gas ballast valve	bar	-	1.2	
Permissible ambient temperature storage / operation	°C	-10 to +60 / +10 to +40		
Permissible relative atmospheric moisture during operation (no condensation)	%	30 to 85		
Power (electric)	W	575		
No-load speed	min <sup>-1</sup>	30 - 2400		
Maximum permissible range of supply voltage ( ±10% ). <b>Attention: Observe specifications of rating plate!</b>		100-120 V~ 50-60 Hz 200-230 V~ 50-60 Hz		
Maximum nominal current draw at: 100-120 V~ 50/60 Hz 200-230 V~ 50/60 Hz	A A	3.2 1.4	6.3 2.5	
Device fuse		slow blow fuse 4A (200-230V) / 8A (100-120V)		
Motor protection		thermal cutout		
Degree of protection IEC 529		IP 20		
Inlet		on demand		
Outlet		silencer / hose nozzle NW 10	hose nozzle NW 10	
Dimensions L x W x H approx.	mm	on demand	on demand	on demand
Weight approx.	kg	13.8	13.8	16.3

**We reserve the right for technical modifications without prior notice!**

Type		PC 3002 VARIO o.C.	PC 3003 VARIO o.C.	PC 3004 VARIO o.C.
Maximum pumping speed (ISO 21360)*	m <sup>3</sup> /h	2.8	2.8	4.6
Ultimate vacuum (absolute) without gas ballast	mbar	7	0.6	1.5
Ultimate vacuum (absolute) with gas ballast	mbar	12	2	3
Maximum permissible inlet pressure (absolute)	bar	1.1		
Maximum permissible outlet pressure (absolute)	bar	1.1		
Maximum permissible pressure (absolute) at gas ballast valve	bar	1.2		
Permissible ambient temperature storage / operation	°C	-10 to +60 / +10 to +40		
Permissible relative atmospheric moisture during operation (no condensation)	%	30 to 85		
Power (electric)	W	575		
No-load speed	min <sup>-1</sup>	30 - 2400		
Maximum permissible range of supply voltage ( ±10% ). <b>Attention: Observe specifications of rating plate!</b>		100-120 V~ 50-60 Hz 200-230 V~ 50-60 Hz		
Maximum nominal current draw at: 100-120 V~ 50/60 Hz 200-230 V~ 50/60 Hz	A A	3.2 1.4	6.3 2.5	
Device fuse		slow blow fuse 4A (200-230V) / 8A (100-120V)		
Motor protection		thermal cutout		
Degree of protection IEC 529		IP 20		
Inlet		connection for PTFE tubing 10/8 mm		
Outlet		hose nozzle NW 10		
Coolant connections (waste vapour condenser)		hose nozzle NW 6-8		
Maximum permissible pressure of coolant at waste vapour condenser	bar	6 (absolute)		
Permissible range of coolant temperature	°C	-15 to +20		
Dimensions L x W x H approx.	mm	422 x 242 x 428		
Weight approx.	kg	16.4	18.9	

\* Pumping speed of diaphragm pump

**We reserve the right for technical modifications without prior notice!**

Type	PC 3004 VARIO o.C. + EK Peltronic	
Maximum pumping speed ISO 21360*	m <sup>3</sup> /h	4.6
Ultimate vacuum (absolute) without gas ballast	mbar	1.5
Ultimate vacuum (absolute) with gas ballast	mbar	3
Maximum permissible inlet pressure (absolute)	bar	1.1
Maximum permissible outlet pressure (absolute)	bar	1.1
Maximum permissible pressure (absolute) at gas ballast valve	bar	1.2
Permissible ambient temperature storage / operation	°C	-10 to +60 / +10 to +40
Permissible relative atmospheric moisture during operation (no condensation)	%	30 to 85
Power (electric, pump)	W	575
Power draw (controlled, EK Peltronic)	W	7 - 160
Heat dissipation incl. condensation heat (EK Peltronic)	W	7 - 200
No-load speed	min <sup>-1</sup>	30 - 2400
Maximum permissible range of supply voltage ( ±10% ). <b>Attention: Observe specifications of rating plate!</b>		100-120 V~ 50-60 Hz 200-230 V~ 50-60 Hz
Maximum nominal current draw (pump) at: 100-120 V~ 50/60 Hz 200-230 V~ 50/60 Hz	A A	6.3 2.5
Nominal current draw (EK Peltronic) at: 100-120 V~ 50/60 Hz 200-230 V~ 50/60 Hz	A A	1.6 0.7
Device fuse		slow blow fuse 4A (200-230V) / 8A (100-120V)
Motor protection		thermal cutout
Degree of protection IEC 529		IP 20
Inlet		connection for PTFE tubing 10/8 mm
Outlet		connection for PTFE tubing 10/8mm
Cooling capacity at 21°C ambient temperature	W	approx. 50
Control temperature	°C	10
Dimensions L x W x H approx.	mm	428 x 330 x 421
Weight approx.	kg	22.6

\* Pumping speed of diaphragm pump

**We reserve the right for technical modifications without prior notice!**

Type		MV 10C VARIO-B PC 3010 VARIO o.C.	MD 12C VARIO-B PC 3012 VARIO o.C.
Maximum pumping speed (ISO 21360)*	m <sup>3</sup> /h	8.6	10.0
Ultimate vacuum (absolute) without gas ballast	mbar	0.6	2
Ultimate vacuum (absolute) with gas ballast	mbar	9	9
Maximum permissible outlet pressure (absolute)	bar	1.1	
Maximum permissible inlet pressure (absolute)	bar	1.1	
Maximum permissible pressure (absolute) at gas ballast valve	bar	1.2	
Permissible ambient temperature storage / operation	°C	-10 to +60 / +10 to +40	
Permissible relative atmospheric moisture during operation (no condensation)	%	30 to 85	
Power (electric)	W	575	
No-load speed	min <sup>-1</sup>	30 - 2400	
Maximum permissible range of supply voltage ( ±10% ). <b>Attention: Observe specifications of rating plate!</b>		100-120 V~ 50-60 Hz 200-230 V~ 50-60 Hz	
Maximum nominal current draw at: 100-120 V~ 50/60 Hz 200-230 V~ 50/60 Hz	A A	8 3.5	
Device fuse		slow blow fuse 4A (200-230V) / 8A (100-120V)	
Motor protection		thermal cutout	
Degree of protection IEC 529		IP 20	
Inlet Pump Pumping unit		small flange NW 25 small flange NW 25 or hose nozzle NW 15	
Outlet		hose nozzle NW 10	
Coolant connections (waste vapour condenser)		hose nozzle NW 6-8	
Maximum permissible pressure of coolant at waste vapour condenser	bar	6 (absolute)	
Permissible range of coolant temperature	°C	-15 to +20	
Dimensions L x W x H approx. Pump Pumping unit	mm	505 x 237 x 303 645 x 365 x 600	
Weight approx. Pump Pumping unit	kg	26.5 34.0	

\* Pumping speed of diaphragm pump

**We reserve the right for technical modifications  
without prior notice!**

**Gas inlet temperatures**

<b>Operating condition</b>	<b>Inlet pressure</b>	<b>Permitted range of gas temperatures at inlet</b>
Continuous operation	> 100 mbar (high gas load)	+10°C to +40°C
Continuous operation	< 100 mbar (low gas load)	0°C to +60°C
Short-time (< 5 minutes)	< 100 mbar (low gas load)	-10°C to +80°C

**Wetted parts**


<b>Components</b>	<b>Wetted materials</b>
<b>Pump</b>	
Head cover	ETFE carbon fibre reinforced
Diaphragm clamping disc	ETFE carbon fibre reinforced
Diaphragm	PTFE
Valves	FFKM (ME 4C NT VARIO: PTFE)
O-rings	FPM
Valve head (pumps NT VARIO)	ECTFE carbon fibre reinforced
Housing cover insert (pumps VARIO-B / PC 301x)	PTFE carbon reinforced
Gas ballast tube, outlet (pumps NT VARIO)	PTFE carbon reinforced
Inlet (pumps NT VARIO)	PTFE carbon reinforced
Inlet (pumps VARIO-B)	Stainless steel
Outlet (pumps VARIO-B)	ETFE
Silencer // hose to silencer	PBT/PVF // PVC
Fittings (pumps VARIO-B / PC 301x VARIO)	ETFE/ECTFE
Tubing	PTFE
<b>Pumping unit</b>	
Inlet pumping unit (PC 300x / PC 301x VARIO)	PVDF / Stainless steel
Outlet pumping unit	PET
Distribution head (inlet PC 300x)	PPS glass fibre reinforced
Tubing	PTFE
Screw-in fittings	ETFE / ECTFE
O-ring at the catchpot	FPM
Overpressure safety relief device	Silicone rubber / PTFE foil
Blind plug (inlet PC 300x VARIO)	PP
Exhaust waste vapour condenser / catchpot / collecting flask	Borsilicate glass
Catchpot (inlet PC 301x VARIO)	PMP
Drain screw (catchpot PC 301x VARIO)	Steel
O-rings (catchpot PC 301x VARIO)	NBR
Cooling surface	PP PFA

**We reserve the right for technical modification without prior notice!**

## Pump parts


Position	Component	Position	Component
1	Diaphragm pump NT VARIO	11	Recessed grip / handle
3	Mains connection	12	VACUU•BUS cable to controller
4	ON/OFF switch	13	Exhaust waste vapour condenser
5	Pump rating plate	14	Catchpot
6	Fan	15	Coolant inlet
7	Inlet	16	Coolant outlet
8	Outlet	17	Overpressure safety relief device
9	Gas ballast valve	18	Catchpot (inlet)
10	Fuse holder	19	Drain screw
		20	Collecting flask (outlet)
		21	Exhaust waste vapour condenser Peltronic

### ME 4C NT VARIO o.C.

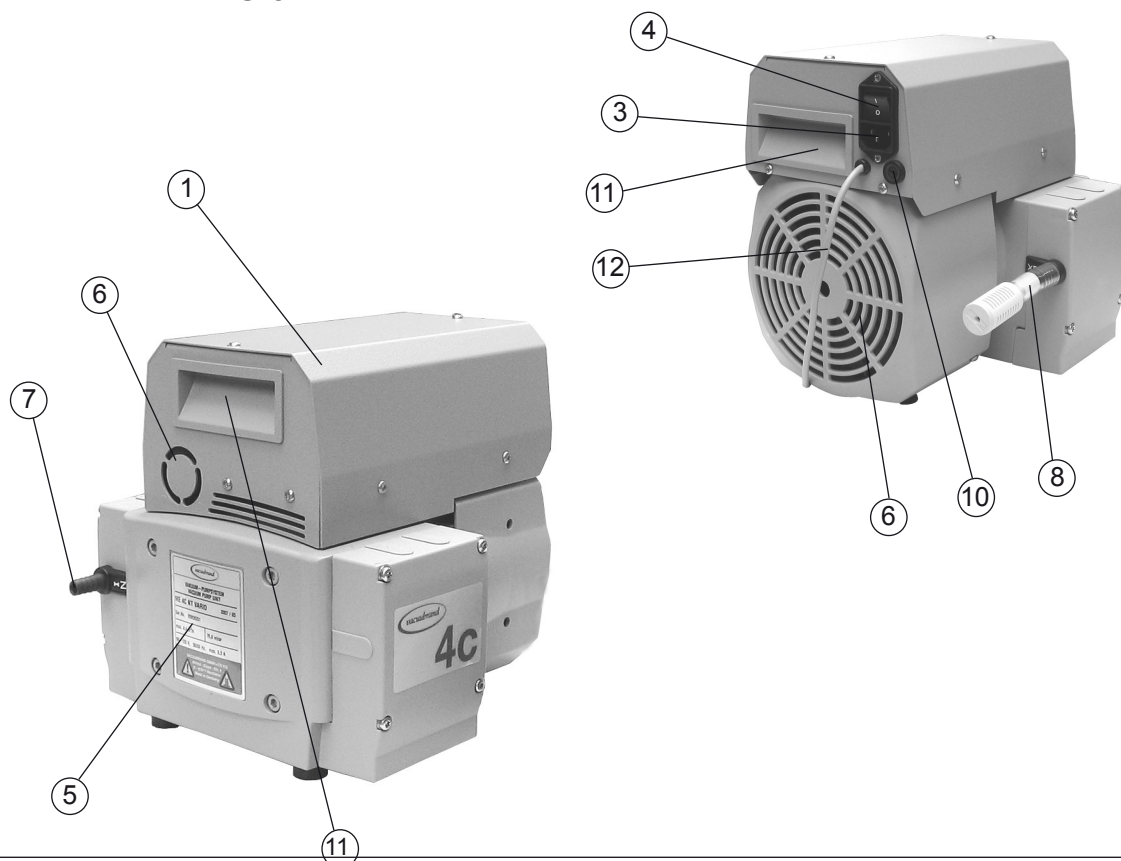





**MZ 2C NT VARIO o.C.**

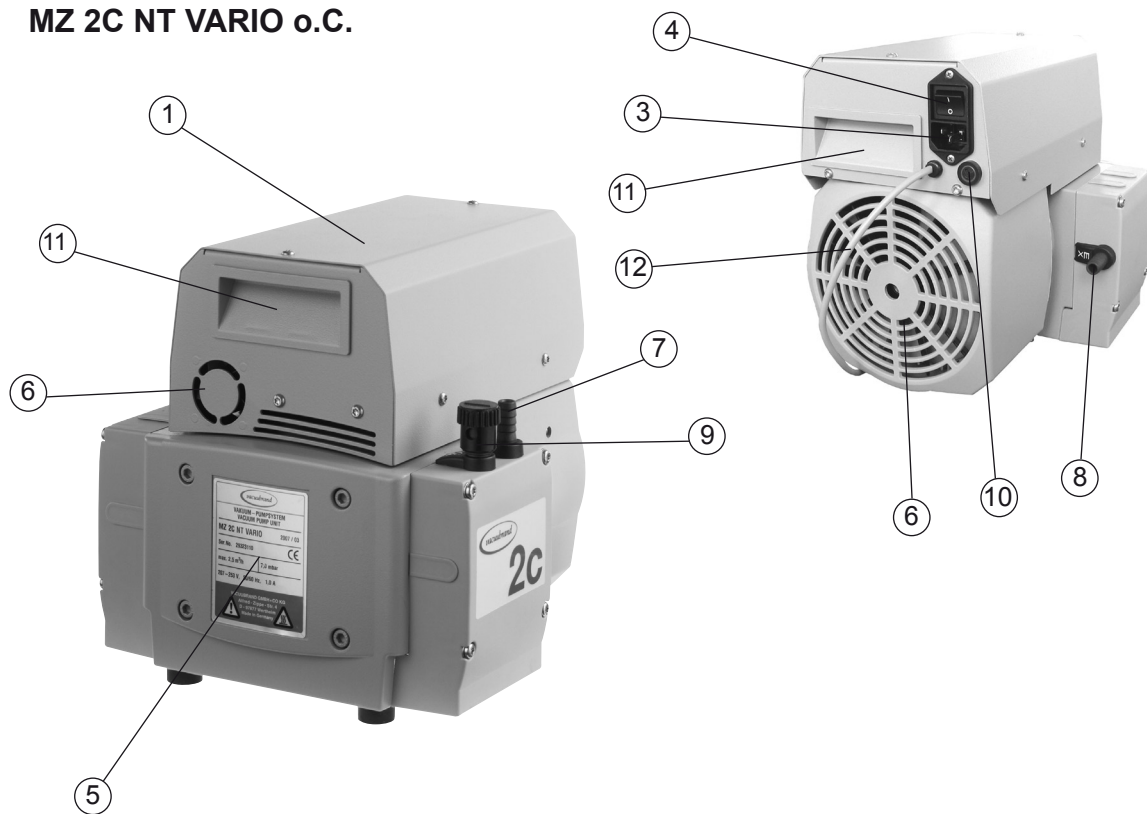


**MD 4C NT VARIO o.C.**

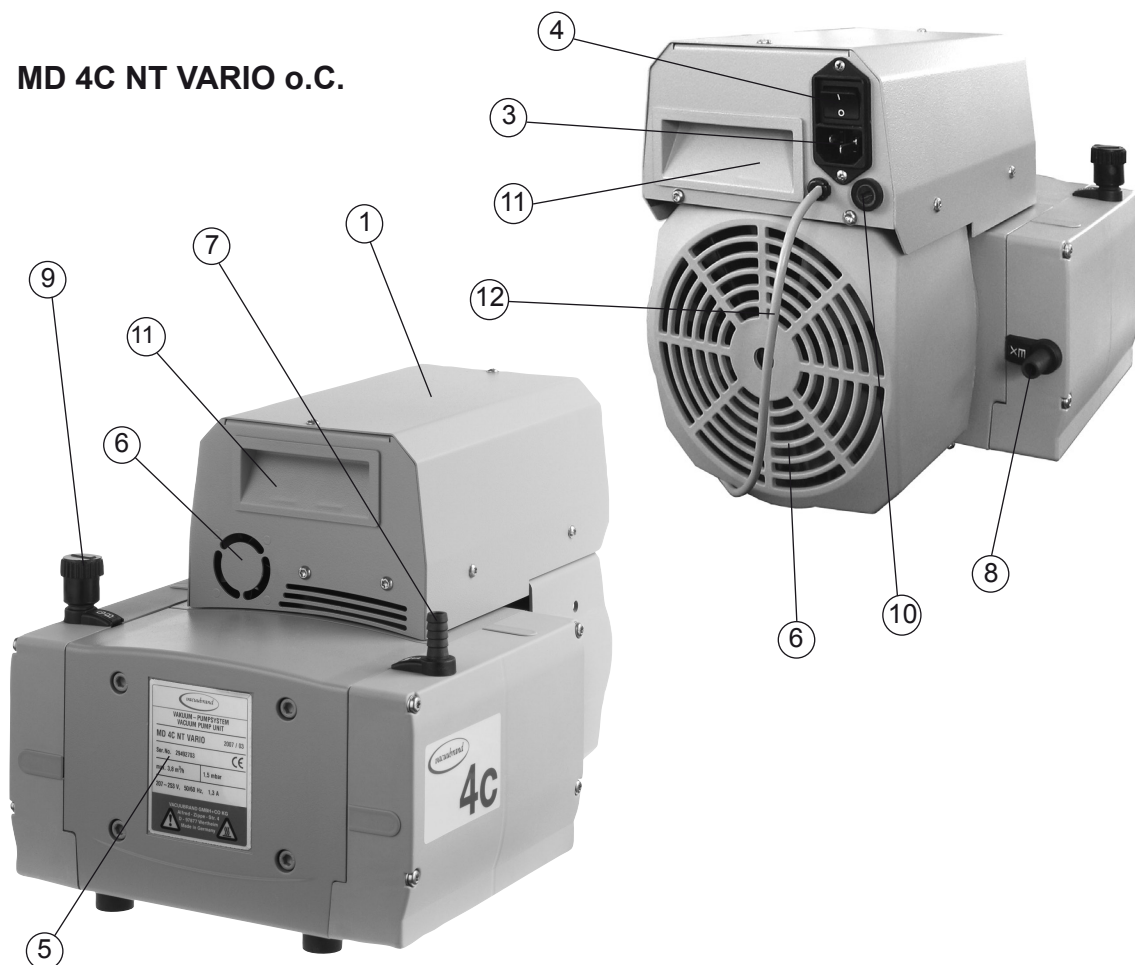


**PC 3002 VARIO o.C.**

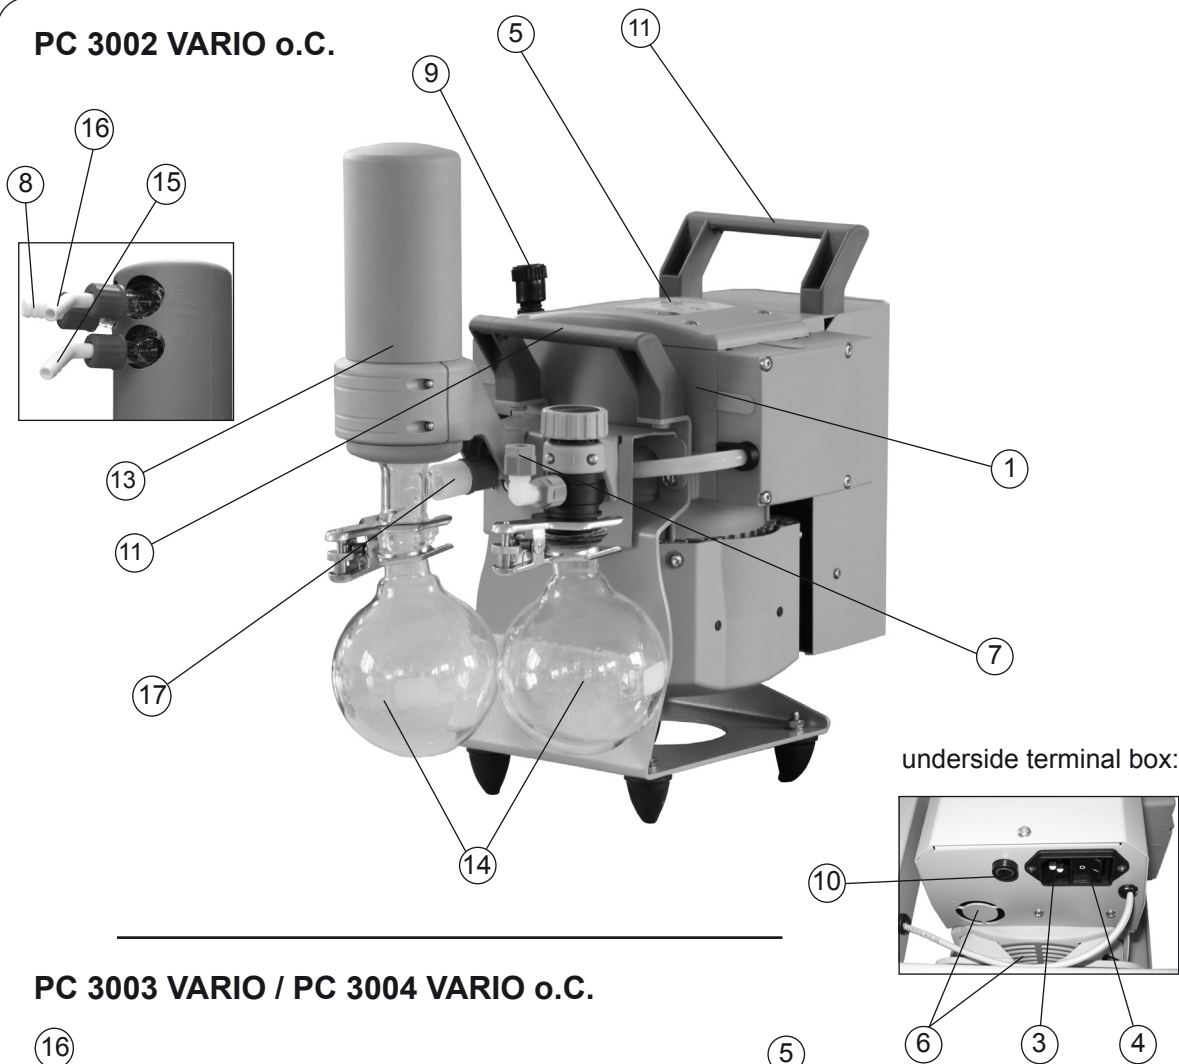


**PC 3003 VARIO / PC 3004 VARIO o.C.**

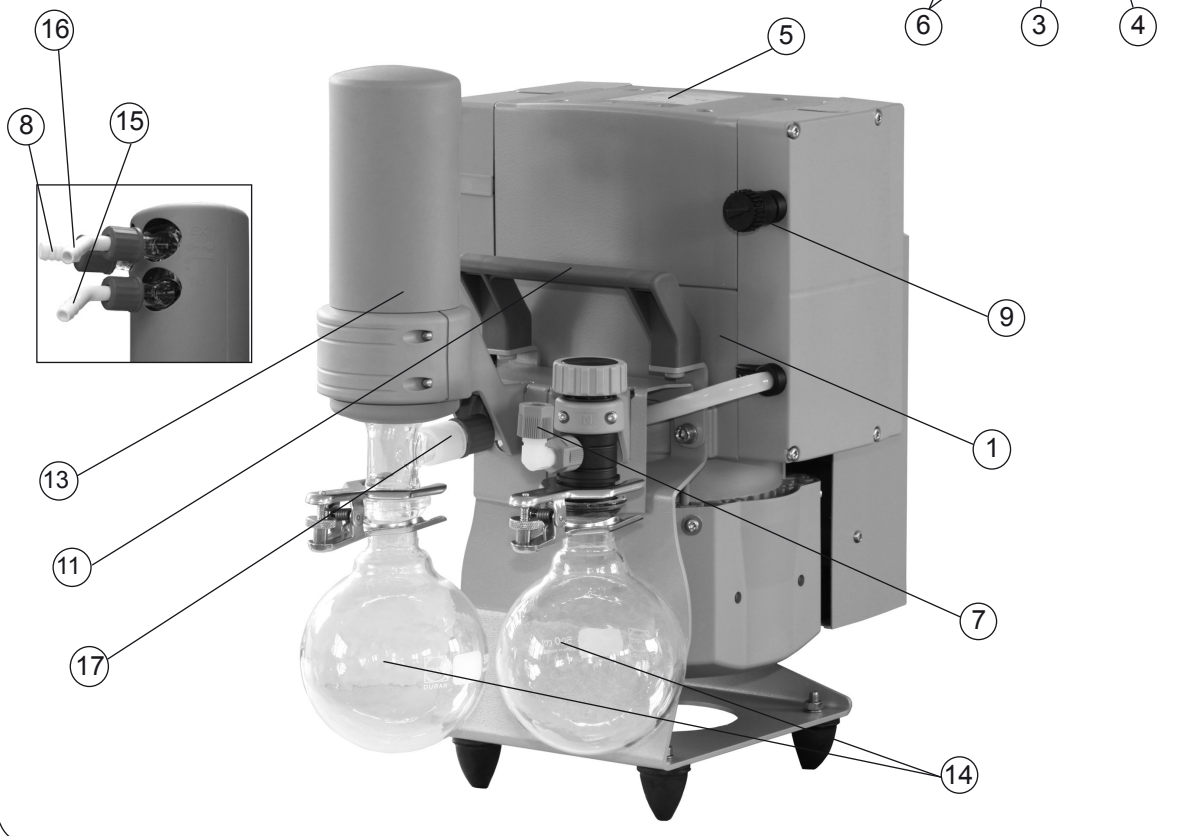


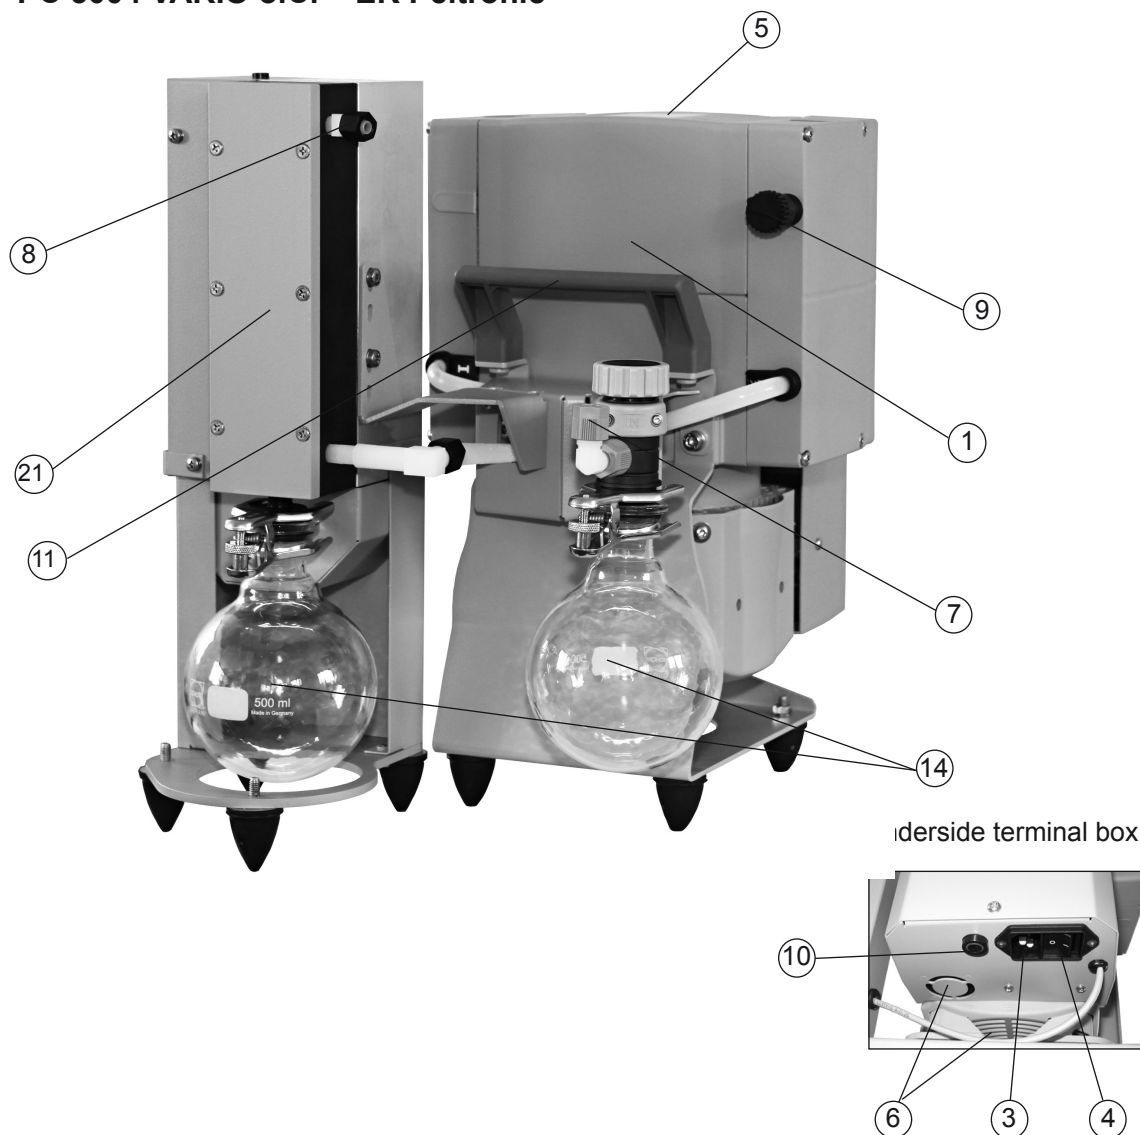
**PC 3004 VARIO o.C. + EK Peltronic**

**Read and comply with the instructions for use of the  
exhaust waste vapour condenser Peltronic!**

**MV 10C VARIO-B / MD 12C VARIO-B o.C.**


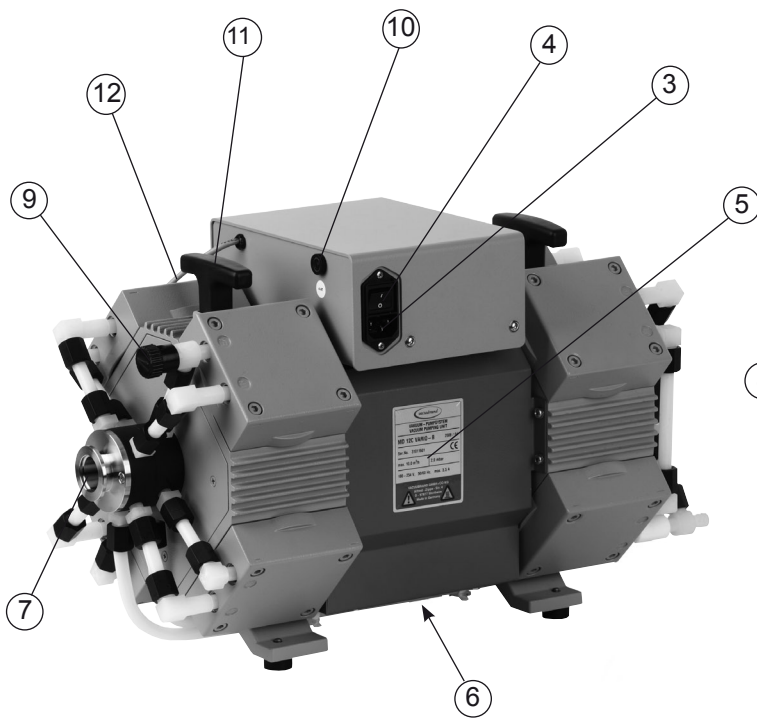


outlet side MV 10C VARIO-B

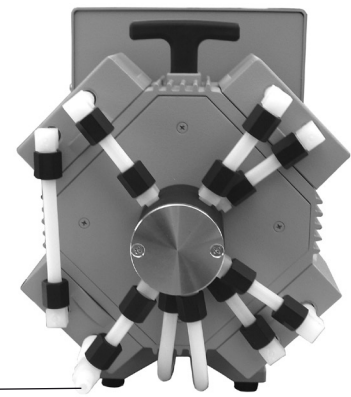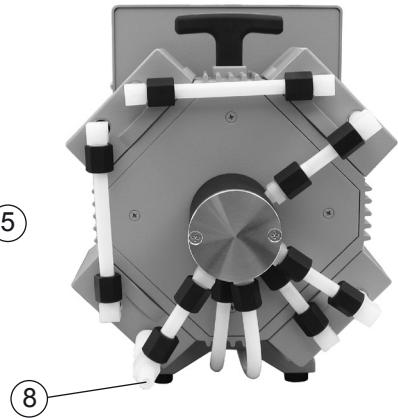

outlet side MD 12C VARIO-B

**PC 3010 VARIO / PC 3012 VARIO o.C.**

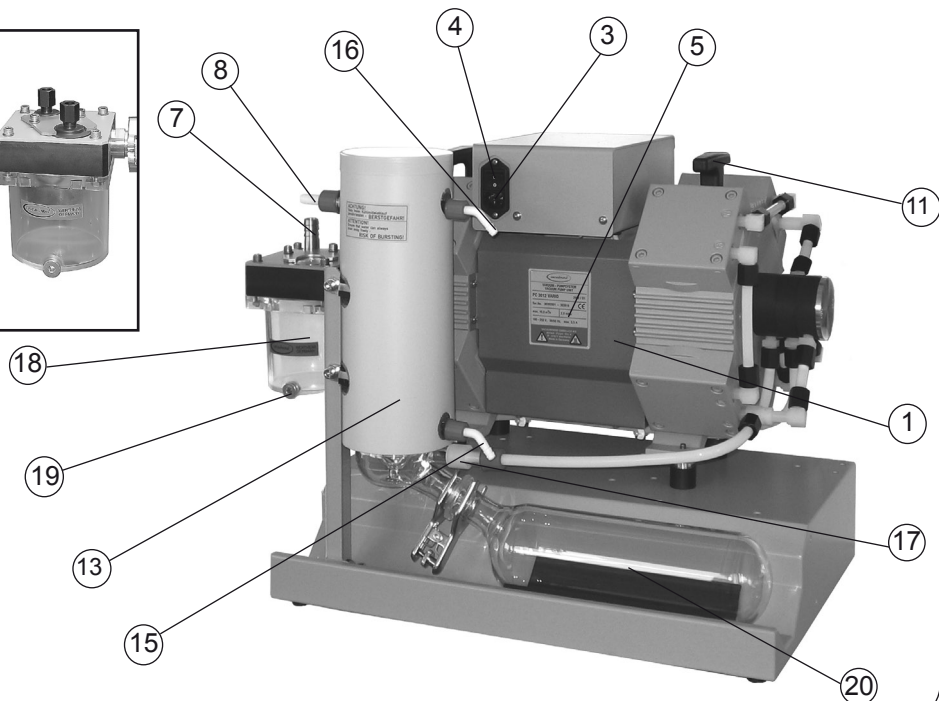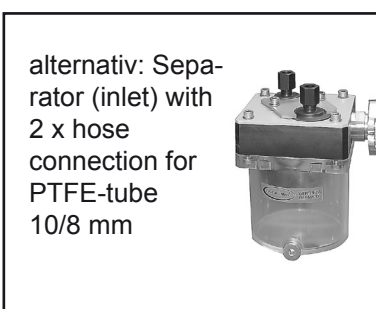

## Use and operation

### *Installing in a vacuum system*

#### CAUTION

- Connection lines at the pump inlet have to be gas tight. Particles and dust must not be aspirated, the user has to provide appropriate filters if necessary. The user must ensure their suitability concerning gas flow, chemical resistance and safety against clogging prior to use.
- Connect an exhaust line gas tight at the pump outlet if necessary. Always dispose of exhaust gases appropriately (e.g. into a fume hood). If there is risk of release of dangerous or polluting fluids, install an appropriate system to catch and dispose of those fluids.
- Reduce the transmission of vibration and prevent mechanical load due to rigid pipelines. Insert elastic hoses or flexible elements as couplings between the pump and rigid pipes. **Attention:** Flexible elements tend to shrink when evacuated.
- The gas outlet must never be blocked. The exhaust line has always to be free (pressureless) to ensure an unimpeded discharge of gas.
- In case of mains failure accidental venting of the system, especially with an open gas ballast, may occur. If this may cause possible dangers provide suitable safety measures.
- Make sure ventilation is adequate especially if the pump is installed in a housing or if the ambient temperature is elevated. Provide external ventilation if necessary.

#### NOTICE

Avoid throttling losses by using connecting pipes with large diameter and by keeping them as short as possible.

In case of perturbing exhaust noise connect an exhaust hose or use a silencer (see "Accessories").

Install outlet pipelines always falling to avoid backflow of condensate towards the pump.


Use of a suitable valve to isolate the pump from the vacuum system is recommended to allow the pump to warm up before pumping condensable vapours or to clean the pump before it is switched off.

When assembling, ensure **vacuum-tightness**. After assembly, check the whole system for leaks.

Secure hose connections at the pump appropriately against accidental detaching.



**Pumping units PC 30xx VARIO  
with separator at the inlet and exhaust waste vapour condenser at the outlet:**

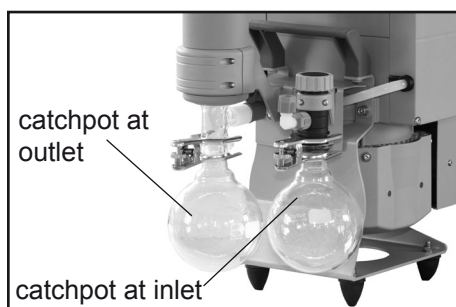


The catchpot at the inlet prevents droplets and particles from entering the pump.

- ☞ Lifetimes of diaphragms and valves are enhanced.
- ☞ Improves vacuum in case of condensation.

**Round bottom flasks (PC 300x VARIO):**


Both round bottom flasks are coated with a protective layer to prevent disintegration in case of breakage or implosion.

- Assemble the catchpots at the inlet and at the outlet using joint clips.

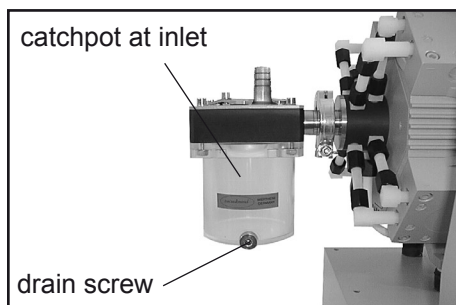

**PC 301x VARIO:**

- Assemble the inlet catchpot with centring ring and clamping ring at the inlet of the pump.
- Assemble the collecting flask at the exhaust waste vapour condenser using joint clips.

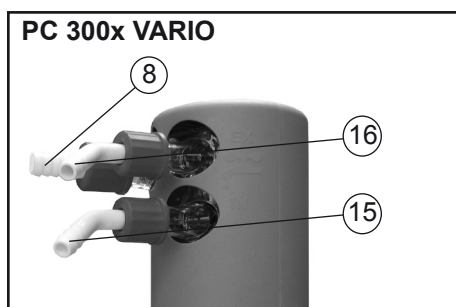


**Exhaust waste vapour condenser:**


- Assemble hose nozzles for coolant inlet and coolant outlet pipelines at the exhaust waste vapour condenser.

The exhaust waste vapour condenser enables an efficient condensation of the pumped vapours at the outlet.

- ☞ No backflow of condensates.
- ☞ Controlled recovery of condensates.
- ☞ Next to 100% solvent recovery.
- ☞ The isolation cover protects against glass splinters in case of breaking, acts as thermal isolation to avoid condensation of humidity and is intended to absorb shocks.

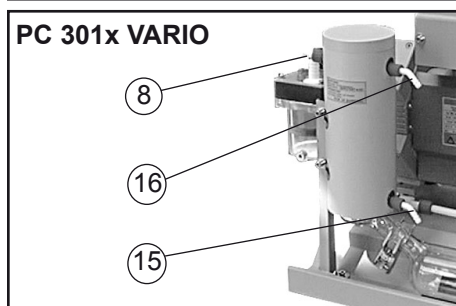

**Pumping unit PC 3004VARIO  
with exhaust waste vapour condenser Peltronic at the outlet:**

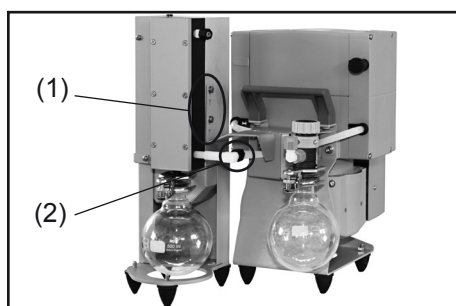

The exhaust waste vapour condenser Peltronic is separately packed and has to be assembled at the pumping unit prior to use:

- Affix EK Peltronic with the mounting angle to the pumping unit (1).
- Slip the PTFE tube (connecting tube between pump outlet and inlet of Peltronic) onto the hose connection of the Peltronic and fasten with union nut (2).

**NOTICE**

Attach the pipelines of the coolant circuit to the respective hose nozzles (see image, hose nozzles 6-8 mm) at the waste vapour condenser. Check hose connections prior to starting operation of the cooling system.

Secure coolant hoses at the hose nozzles (e.g. with hose clip) to prevent their accidental slipping.

**CAUTION**

- The gas outlet (hose nozzle 10 mm) must not be blocked. The exhaust pipeline has always to be free and pressureless to enable an unhindered discharge of gases.
- Connect the exhaust to a suitable treatment plant to prevent the discharge of dangerous gases and vapours to the surrounding atmosphere.
- **Attention:** Install hoses of the cooling system in a way to avoid flow / dropping of condensed water onto the pumping unit (especially cables and electronic parts).
- Ensure that the coolant outlet pipeline is always free and that it cannot get blocked.
- Install coolant valves always in the supply line of the waste vapour condenser only.

***During operation*****CAUTION**

- **Maximum ambient temperature:** 40 °C
- Make sure ventilation is adequate especially if the pump is installed in a housing or if the ambient temperature is elevated.
- **Potentially dangerous gases or vapours** at the outlet of the pump have to be drained and disposed of appropriately.
- Due to the high compression ratio of the pumps, the pressure at the outlet port might get higher than the maximally permitted pressure compatible with the **mechanical stability** of the system. Ensure that the pump outlet is neither blocked nor restricted.

**NOTICE**

If the pump is installed in altitudes of more than 1000 m above mean sea level check compatibility with applicable safety requirements, especially IEC 60034 (motor might overheat due to insufficient cooling).

Do not start the pump if the **pressure at outlet port** exceeds **maximum 1.1 bar (absolute)**. Attempts to start the pump at higher pressures may cause blockade and damage of the motor.

Check compatibility with **maximally permitted pressure** at inlet and outlet.

Prevent internal condensation, transfer of liquids or dust. The diaphragms and valves will be damaged, if liquids are pumped in significant amounts.

Check the pump regularly for external soiling and deposits, clean if necessary to avoid an increase of the pump's operating temperature.

If pumping condensable vapours (water vapour, solvents, ...), let the pump run with gas ballast to reduce condensation in the pump.

Operation with silencer at the outlet: Operating the pump at high inlet pressure or pumping dusty gases for a long time may cause clogging of the silencer. Check the silencer regularly and replace if necessary.

In case of excess temperature, the motor is shut down by a **thermal cutout** in the winding. Attention: Reset possible only manually. Switch off the pump or isolate the equipment from mains. Determine and eliminate the cause of failure. Wait approx. five minutes before restarting the pump.

Check fan (underside the pump) regularly for dust/dirt. Clean if necessary.




A warm up period (approx. 15 min.) is required to ensure that the rated ultimate vacuum and pumping speed are attained.

### **Attention: Important notes regarding the use of gas ballast**

## **! DANGER**

- When using air rather than inert gas, risk of significant damage to equipment and/or facilities, risk of personal injury or even loss of life exists due to the formation of hazardous and/or explosive mixtures if air and pumped media react inside or at the outlet of the pump.
- Make sure that air/gas inlet through the gas ballast valve never leads to hazardous, explosive or otherwise dangerous mixtures. If in doubt, use inert gas.

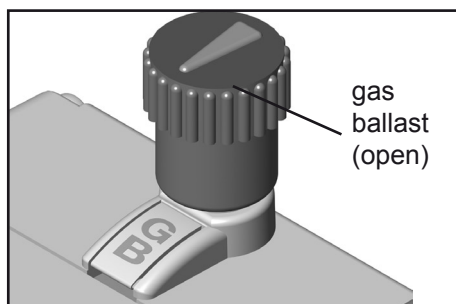

In case of condensable vapours (water vapour, solvents, ...):

- ☞ Do not pump vapour until the pump has reached its operating temperature.
- ☞ Open gas ballast valve. The gas ballast valve is open if the arrow on the gas ballast cap shows towards the marking "GB".
- ☞ With gas ballast valve open ultimate vacuum will be reduced, pumping speed is decreased.
- ☞ Use inert gas at the air inlet to avoid the formation of explosive mixtures.
- ☞ Close gas ballast valve by turning it 180°.

In case of low boiling solvents when the formation of condensate is unlikely, the use of gas ballast might be unnecessary.

Operating the pump without gas ballast increases the solvent recovery rate at the exhaust waste vapour condenser.

### **Attention: Notes concerning the operation of the exhaust waste vapour condenser**

## **! WARNING**

- ☞ The gas outlet (hose nozzle 10 mm) must not be blocked. The exhaust pipeline has always to be free and pressureless to enable an unhindered discharge of gases.
- ☞ Connect the exhaust to a suitable treatment plant to prevent the discharge of dangerous gases and vapours to the surrounding atmosphere.
- ☞ Ensure that the coolant outlet pipeline is always free and that it cannot get blocked.

- Check the overpressure safety relief device at the exhaust waste vapour condenser regularly, replace if necessary. Check especially for conglutination and cracks.

## **! CAUTION**

- Maximum permissible coolant pressure at the exhaust waste vapour condenser: 6 bar (absolute)
- Comply with the maximum permissible coolant pressures of additional components in the coolant circuit (e.g. coolant valve).
- Install coolant valves always in the supply line of the waste vapour condenser only.
- Avoid overpressure in the coolant circuit (e.g. caused by blocked or squeezed coolant hoses).
- In case of **condensation**: Check liquid level in both catchpots during operation. Avoid overflowing of the catchpots. Install a level sensor (order-no. 699908) for monitoring if necessary (VACUUBRAND controller CVC 3000 or VNC 2 is required).

**NOTICE**

Do not allow the catchpots to get overfilled. Maximum liquid level approx. 80%, to avoid problems when removing the catchpots.  
Check liquid level in both catchpots regularly and drain catchpots in time. In case, install level sensor (see "Accessories").

Permissible range of coolant temperature at the exhaust waste vapour condenser:  
-15°C to +20°C

Check hose connections prior to starting operation of the cooling system.  
Check coolant hoses regularly during operation.

**Removing the catchpots:**

Catchpot at outlet:

Remove joint clip, remove catchpot and drain condensate.

Round bottom flask at inlet:

Admit air or inert gas (via inlet of pumping unit) to atmospheric pressure. Remove joint clip, remove catchpot and drain condensate.

Catchpot at inlet (PC 301x VARIO):

Admit air or inert gas (via inlet of pumping unit) to atmospheric pressure. Open drain screw and drain condensate.

**NOTICE**

➔ Reassemble drained catchpots.

**Important:** Comply with regulations when disposing of solvents/condensates. Re-use if possible, purify if contaminated.

**Shutdown****NOTICE****Short-term:**

Has the pump been exposed to condensate?

- Allow the pump to continue to run at atmospheric pressure for a few minutes (continuous pumping).

Has the pump been exposed to media which may damage the pump materials or forms deposits?

- Check and clean pump heads if necessary.

**Long-term:**

- Take measures as described in section short-term shutdown.
- Separate pump from the application. Close gas ballast valve.
- Drain catchpots.
- Close inlet and outlet port (e. g. with transport caps).
- Store the pump in dry conditions.

## Accessories


<b>Controller CVC 3000</b> (table top unit) .....	<b>683160</b>
<b>Controller CVC 3000</b> (built-in version) .....	<b>636595</b>
<b>Controller VNC 2 VARIO E</b> .....	<b>683080</b>
<b>External pressure transducer VSK 3000</b> , capacitive, ceramic diaphragm sensor 1080-0.1 mbar.....	<b>636657</b>
<b>Coolant valve VKW-B</b> , 24 V= .....	<b>674220</b>
<b>Venting valve VBM-B / KF 16</b> , 24 V= .....	<b>674217</b>
<b>Y-type adapter VACUU•BUS</b> .....	<b>636656</b>
<b>Wall bushing VACUU•BUS</b> .....	<b>636153</b>
<b>Extension cable VACUU•BUS</b> , 2m.....	<b>612552</b>
<b>Cable RS 232C</b> , 9-pole, Sub-D.....	<b>637837</b>
<b>Installation set CVC 3000</b> (clips and screws).....	<b>636593</b>
<b>Level sensor</b> (control of liquid level in catchpots, only for PC 3002/3003/3004 VARIO).....	<b>699908</b>
<b>Exhaust waste vapour condenser Peltronic</b> .....	<b>699905</b>
<b>Silencer</b> (with connection hose).....	<b>636588</b>

**Attention:** Dust-laden gases, deposits and condensed solvent vapour can restrict air flow out the silencer. The resultant back pressure can lead to damage of pump bearings, diaphragms, and valves. Under those conditions, a silencer must not be used.

**Conversion of VACUUBRAND valves with diode plug to VACUUBRAND valves with VACUU•BUS plug:**

VACUUBRAND-valve with diode plug	Conversion kit valve cable with VACUU•BUS plug
Coolant valve VKW, 24 V= (676013)	612567
Venting valve VBM, 24 V= (666817)	612554

### Vacuum distribution:

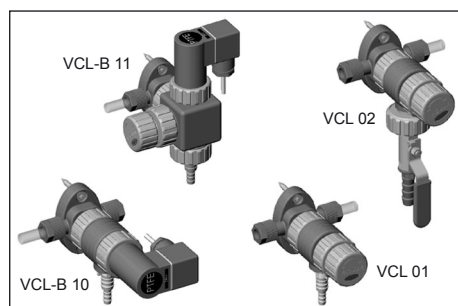

The VACUU•LAN® modules allow process orientated, flexible and cost effective connections according to the requirements: One vacuum pump for multiple work stations.

**VACUU•LAN® manual flow control module VCL 01** ..... **677106**

**VACUU•LAN® shut off / manual flow control module VCL 02** ..... **677107**

**VACUU•LAN® automatic control module VCL-B 10** ..... **677208**

**VACUU•LAN® manual flow control/ automatic control module VCL-B 11** ..... **677209**

On this page we offer only a small selection of VACUU•LAN® options. Please refer for further information.

**For additional accessories such as vacuum valves, small-flange components, vacuum gauges or vacuum controllers refer to [www.vacuubrand.com](http://www.vacuubrand.com)**

### Spare parts (PC 301x VARIO):

<b>Exhaust waste vapour condenser</b> .....	<b>699975</b>
<b>Catchpot</b> (at inlet).....	<b>699980</b>

## Troubleshooting

Fault	Possible cause	Remedy
<input type="checkbox"/> Pump does not start or stops immediately.	<ul style="list-style-type: none"> <li>➔ Pump has been exposed to condensate?</li> <li>➔ Overpressure in the exhaust line?</li> </ul>	<ul style="list-style-type: none"> <li>➔ Allow pump to run for some minutes at maximum speed with atmospheric pressure at the inlet.</li> <li>➔ Open exhaust line, ensure a free (pressureless) outlet line.</li> </ul>
<input type="checkbox"/> Pump does not achieve its ultimate vacuum or usual pumping speed.	<ul style="list-style-type: none"> <li>➔ Centring ring not correctly positioned or leak in the pipeline or vacuum system?</li> <li>➔ Long, narrow line?</li> <li>➔ Pump has been exposed to condensate?</li> <li>➔ Deposits have been formed inside the pump?</li> <li>➔ Diaphragms or valves defective?</li> <li>➔ Outgassing substances or vapour generated in the process?</li> <li>➔ Pump too hot?</li> </ul>	<ul style="list-style-type: none"> <li>➔ Check pump directly - connect vacuum gauge directly at pump inlet - then check connection, pipeline and vacuum system if necessary.</li> <li>➔ Use lines with larger diameter, length as short as possible.</li> <li>➔ Allow pump to run for some minutes with atmospheric pressure at the inlet.</li> <li>➔ Clean and inspect the pump heads.</li> <li>➔ Replace diaphragms and/or valves.</li> <li>➔ Check process parameters.</li> <li>➔ Allow pump to cool down. Determine and eliminate the cause of overheating.</li> </ul>
<input type="checkbox"/> Pump too noisy.	<ul style="list-style-type: none"> <li>➔ Loud exhaust noise?</li> <li>➔ Diaphragm crack or diaphragm clamping disc loose?</li> <li>➔ Other causes than mentioned above?</li> </ul>	<ul style="list-style-type: none"> <li>➔ Connect hose or silencer to pump outlet.</li> <li>➔ Perform maintenance.</li> <li>➔ Contact local distributor.</li> </ul>
<input type="checkbox"/> Pump seized.		<ul style="list-style-type: none"> <li>➔ Contact local distributor.</li> </ul>

### NOTICE

A service manual with exploded view drawings, spare parts list and directions for repair is available on request.

📖 The service manual is intended for trained service people only.

## Replacing diaphragms and valves

### NOTICE

All bearings are encapsulated and are filled with long-life lubricant. Under normal operating conditions, the pump is maintenance free. The valves and diaphragms are wear parts. If the rated ultimate vacuum is no longer achieved or in case of increased noise level, the pump interior, the diaphragms and the valves must be cleaned and the diaphragms and valves must be checked for cracks or other damage. Depending on individual cases it may be efficient to check and clean the pump heads on a regular basis. In case of normal wear the lifetime of the diaphragms and valves is > 10000 operating hours.

- Prevent internal condensation, transfer of liquids or dust. The diaphragm and valves will be damaged, if liquids are pumped in significant amount.

If the pump is exposed to corrosive gases or vapour or in case of deposits, maintenance should be carried out frequently.

- Regular maintenance will improve the lifetime of the pump and also protect both man and environment.

**Ensure that maintenance is done only by suitable trained and supervised technicians.**

### WARNING



- ☞ Ensure that the pump cannot be operated accidentally. **Never operate the pump if covers or other parts of the pump are disassembled. Never operate a defective or damaged pump.**

- ☞ **Before starting maintenance** isolate the pump from the electrical supply and wait **two minutes** after isolating the equipment from mains to allow the capacitors to discharge. Avoid the release of pollutants. Allow sufficient cooling of the pump.

### CAUTION

- Attention: The pump might be contaminated with the process chemicals that have been pumped during operation. Ensure that the pump is decontaminated before maintenance and take adequate precautions to protect people from the effects of dangerous substances if contamination has occurred. Ensure that the maintenance technician is familiar with the safety procedures which relate to the products processed by the pumping system.

- Wear appropriate safety-clothing when you come into contact with contaminated components. Avoid the release of pollutants.

### NOTICE


**Before starting maintenance** vent the pump and isolate it from the vacuum system.

Set of seals for ME 4C NT VARIO .....	696864
Set of seals for MZ 2C NT VARIO / PC 3002 VARIO .....	696869
Set of seals for MD 4C NT VARIO / PC 3003/3004 VARIO .....	696870
Set of seals for MV 10C VARIO-B / MD 12C VARIO-B / PC 301x VARIO .....	696821
Diaphragm key (w/f 66) .....	636554

- ☞ **Please read section "Replacing diaphragms and valves" completely before starting maintenance.**

Partially the pictures show pumps in other versions. This doesn't influence replacing diaphragms and valves of the pump.

## Cleaning and inspecting the pump heads (pumps NT VARIO / PC 300x VARIO)

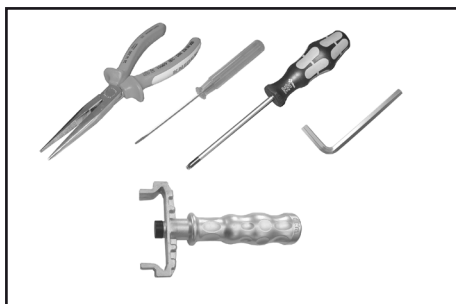

### Tools required (metric):


- Torx screw driver TX20
- Hex key size 5
- Flat-bladed screw driver 2.5 mm
- Flat pliers
- Diaphragm key w/f 66

The replacement of the diaphragm and the replacement of the valves can be carried out separately.

- ☞ To replace the valves, remove the head covers of one side of the pump conjointly with the assembled valve heads and fittings.
- ☞ To maintain the diaphragms, the valve heads and the fittings don't have to be disassembled. The head covers can be removed conjointly with the assembled valve heads and fittings.
- ☞ Maintain only one side of the pump at a time.

### View of the disassembled pump head parts

(fig.: MD 4C NT VARIO)

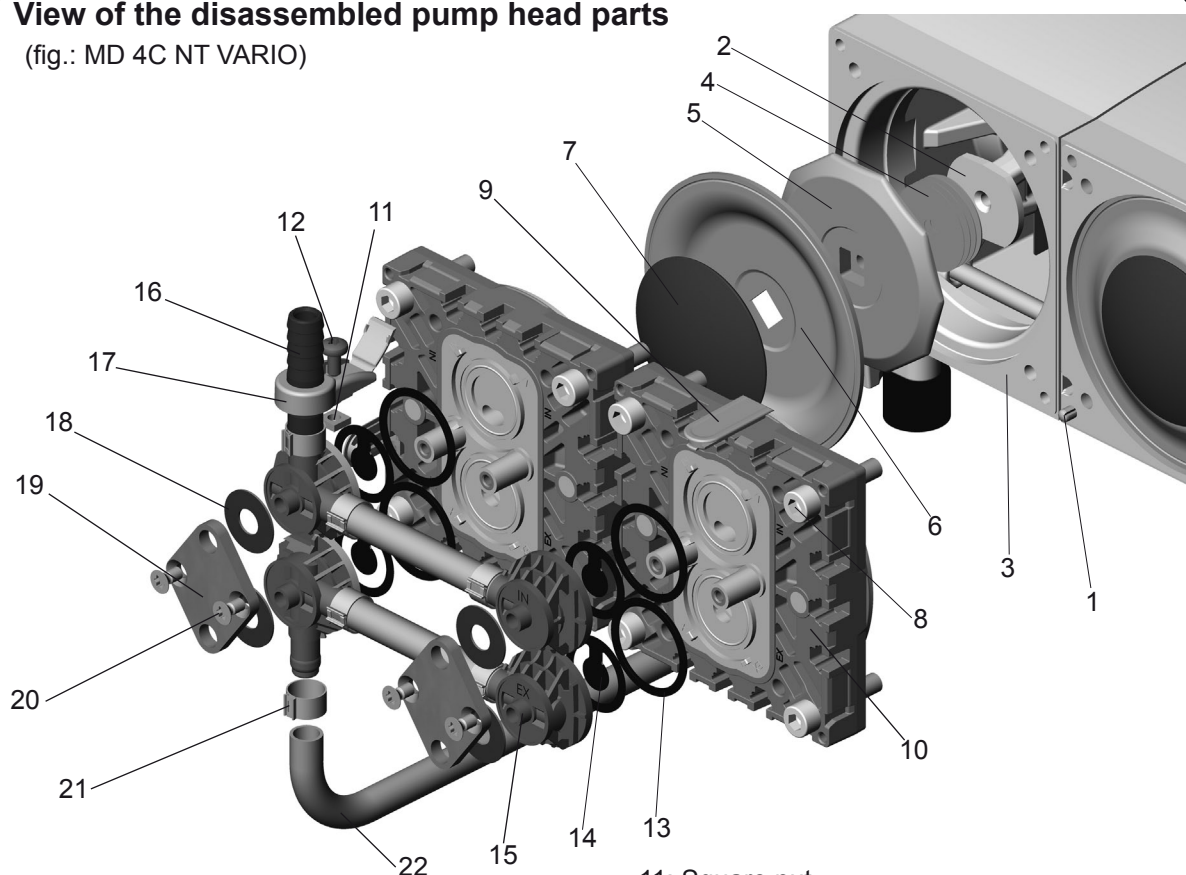

1: Cylinder pin / mark

2: Connecting rod

3: Housing

4: Washer

5: Diaphragm support disc

6: Diaphragm

7: Diaphragm clamping disc with square head screw

8: Socket head screw

9: Blind

10: Head cover

11: Square nut

12: Fillister head screw

13: O-ring

14: Valve

15: Valve head

16: Hose nozzle

17: Connection fastener with hinged cover

18: Disc spring

19: Clamping bracket





20: Countersunk screw

21: Hose clip



22: Connection tube




**Fittings and tubing of the different pump models:**

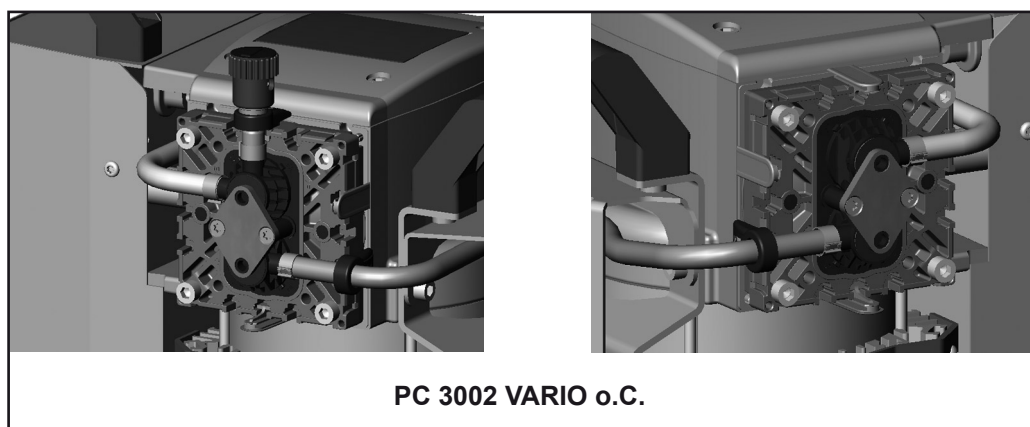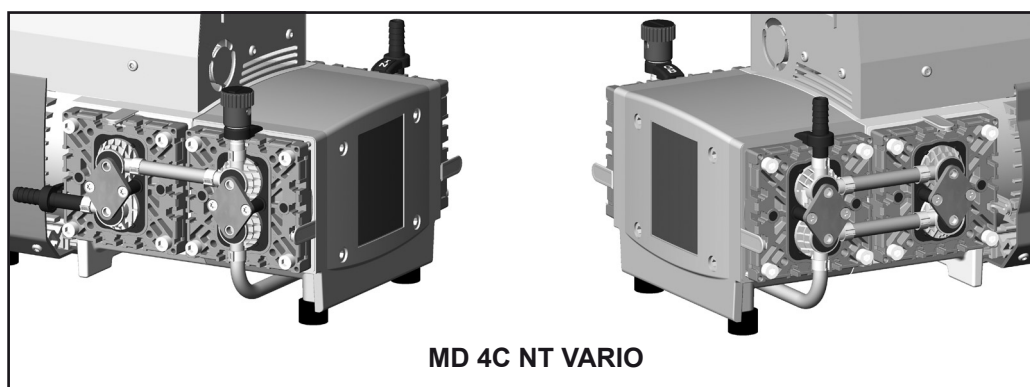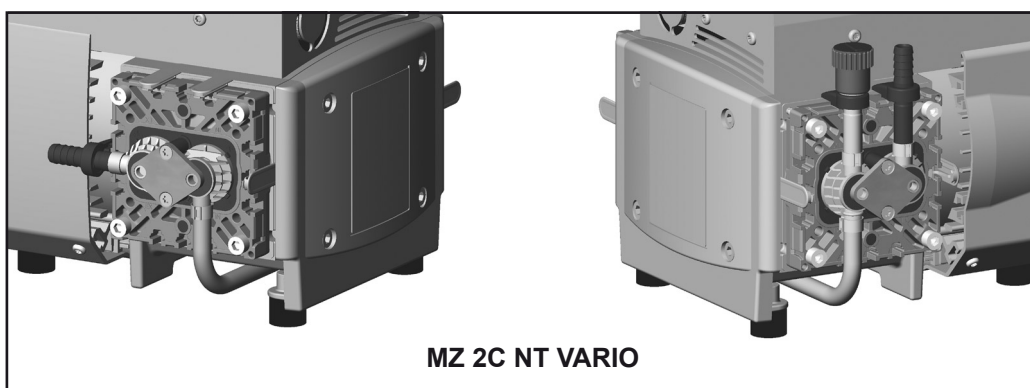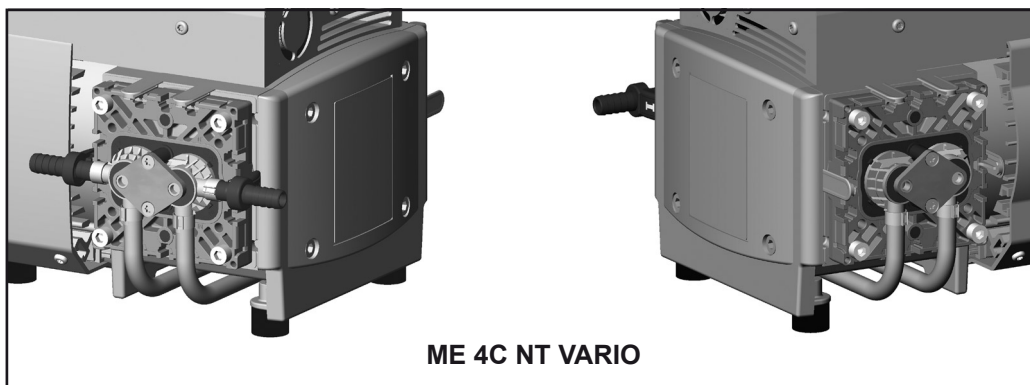

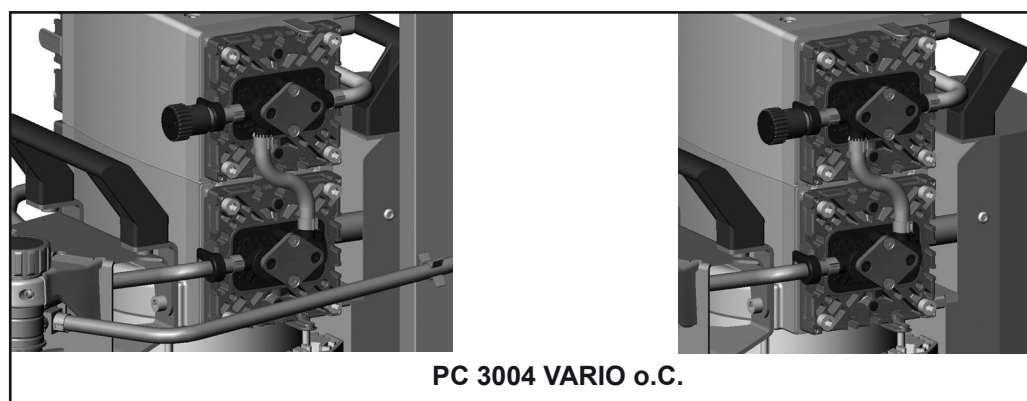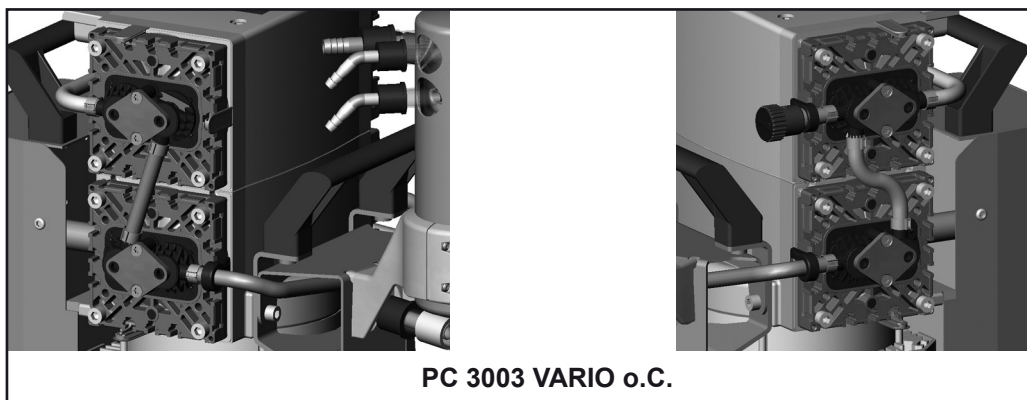


**PC 3002/3003/3004 VARIO:**


- Remove catchpots at inlet and outlet (see "Use and operation").

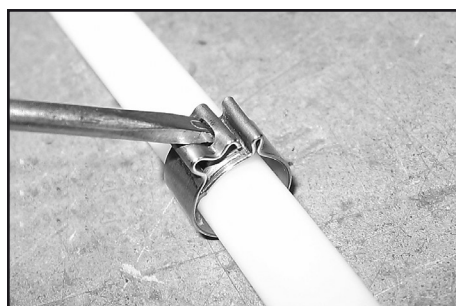**Opening the hose clip:**

- Apply screw driver as shown and turn.

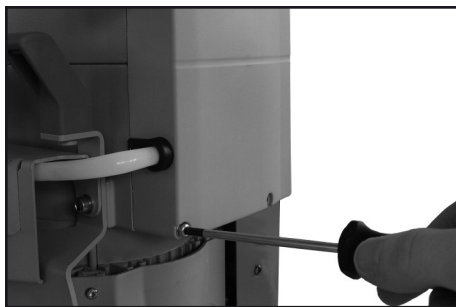

- ➔ Use a Torx screw driver TX20 to unscrew the 4 screws fixing the head cover cowling. Pay attention to the washers under the screws and remove.
- ➔ Pull off head cover cowling carefully. Do not cant.

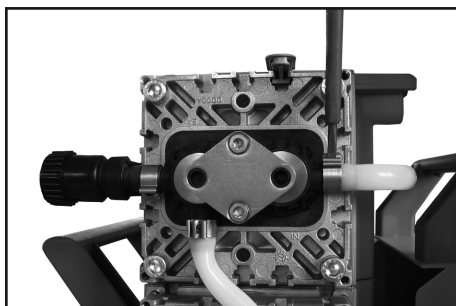


Detach the fixing of the connection tube to the other side of the pump at the valve head.

**PC 3002/3003/3004 VARIO at inlet side:**


Detach the fixing of the connection tube to the other side of the pump as well as the hose connection to the inlet/outlet of the pumping unit at the valve head.

- ➔ Open the hose clip with a flat-bladed screw driver.
- ➔ Pull the tubing off the hose connector.

## Replacing the diaphragm

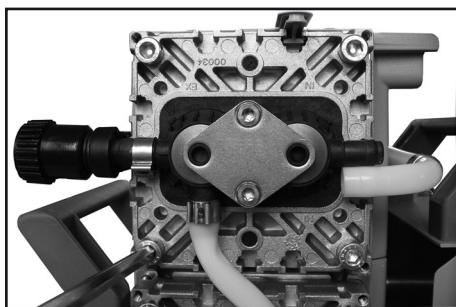


- ➔ Disassemble head covers to check the diaphragm.
- ➔ Unscrew four (pump with two cylinders) or eight (pump with four cylinders) socket head screws with a hex key size 5 and remove both head covers (pumps with two cylinders: only one head cover) together with valve heads and connections.
- ⓘ It is not necessary to disassemble the valve heads, the connection fasteners, or the hose connection between the adjacent head covers (pumps with four cylinders).

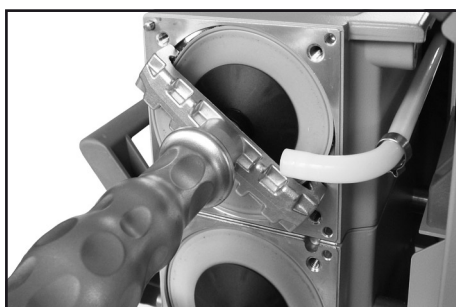


- ⓘ Check diaphragm for damage and replace if necessary.
- ➔ Lift diaphragm carefully sidewise.
- ⓘ Never use a spiky or sharp-edged tool to lift the diaphragm.
- ➔ Use the diaphragm key to grip the diaphragm support disc below the diaphragm.
- ➔ Unscrew diaphragm support disc with diaphragm and diaphragm clamping disc.

- ➔ Check for washers between the diaphragm support disc and the connecting rod. Do not mix the washers from the different pump heads. Make sure that the original number is reassembled at the individual pump head.
- ⓘ If the old diaphragm is difficult to separate from the support disc, immerse assembly in naphtha or petroleum ether. Do not inhale!
- ⓘ Too small number of washers: The pump will not attain ultimate vacuum. Too many washers: Clamping disc will hit head cover; noise or even blockade of the pump.

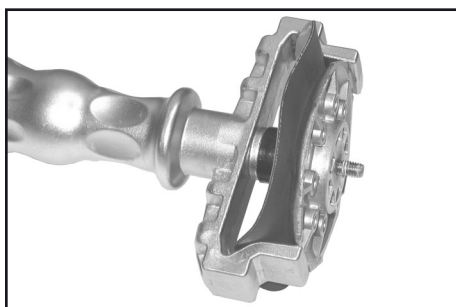

- ➔ Position new diaphragm between diaphragm clamping disc with square head screw and diaphragm support disc.
- ⚠ Attention: Position diaphragm with pale side towards diaphragm clamping disc (to pump chamber).
- ⚠ Make sure that the square head screw of the diaphragm clamping disc is correctly seated in the guide hole of the diaphragm support disc.
- ➔ Lift diaphragm at the side and position carefully together with diaphragm clamping disc and diaphragm support disc in the diaphragm key.
- ⚠ Avoid damage of the diaphragm: Do not bend diaphragm too much.

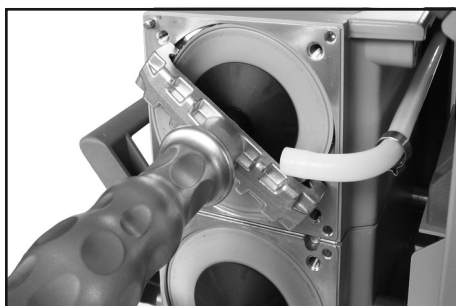

- ⚠ Assemble the original number of washers between support disc and connecting rod.
  - ➔ Screw diaphragm clamping disc, diaphragm, diaphragm support disc and washers to connecting rod.
  - ➔ Optimum torque for the diaphragm support disc: 6 Nm, it is recommended to use a torque key. Attach hex key to diaphragm key (hexagonal bolt 6 mm wide).
- Attention:** Never use the diaphragm key with any additional tools like tongs or hex keys without torque limitation.

## Replacing the valves




- ➔ Open the hinged cover of the connection fastener with a flat-bladed screw driver.




Loosen connection fastener slightly.

- ➔ Turn the fillister head screw with a Torx screw driver TX20 one turn at most.
- ⚠ Do not detach the fillister head screw from the square nut.

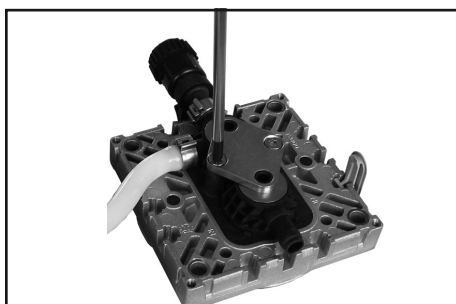


Loosen the clamping brackets on the valve heads.


- ➔ Unscrew at each clamping bracket the two countersunk screws with a Torx screw driver TX20. Remove the clamping brackets.

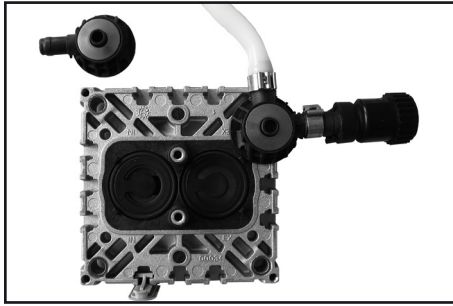


- ➔ Remove valve heads conjointly with disc springs, connection tube if applicable, hose nozzles and connection fasteners or move the valve heads carefully aside. Note position and orientation of the valve heads.
- ☞ Note position of valves.
- ➔ Check valves and O-rings for damages and soiling.
- ➔ Replace valves or O-rings if necessary.
- ➔ Use petroleum ether or industrial solvent to remove deposits. Do not inhale.

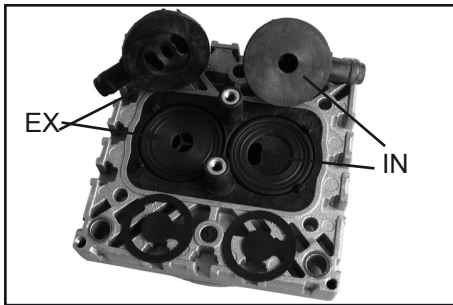


- ➔ Insert O-rings and valves. See figure for the correct position of the valves:
- ☞ **Inlet side (IN):**  
Marked "IN" next to the valve seat. The valve tongue points at the reniform orifice in the valve seat.
- ☞ **Outlet side (EX):**  
Marked with "EX" next to the valve seat. The valve is oriented the same way as the valve at the inlet side.

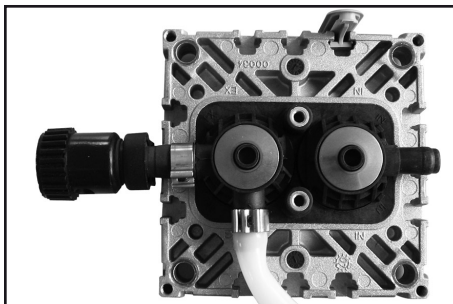

- ➔ Position valve heads, if applicable with hose nozzle, connection tube or connection fastener, and disc springs on the valve seats. Position disc springs with camber upwards. Pay attention to the correct orientation of the valve heads.
  - ☞ Centre the valve head with respect to the valve seat. The valve head must lie plane within the noses of the valve seat.
- Valve head with gas ballast or hose nozzle connection:
- ➔ Insert square nut in the groove of the head cover or position square nut in the groove and screw on connection fastener afterwards.
  - ☞ Fix fillister head screw only slightly.

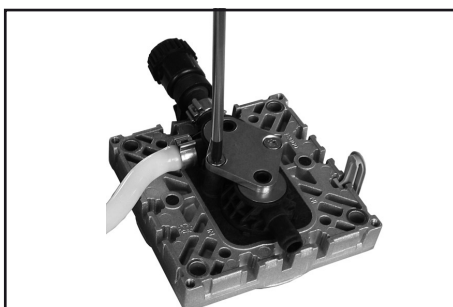


- ➔ Position clamping bracket with countersunk bores upwards.
- ➔ Align the countersunk bores with the threaded pegs.
- ➔ Fasten the countersunk screws slightly and correct the alignment of the valve heads if necessary.
- ➔ Tighten countersunk screws with Torx screw driver TX20.
- ☞ Torque: 3 Nm.

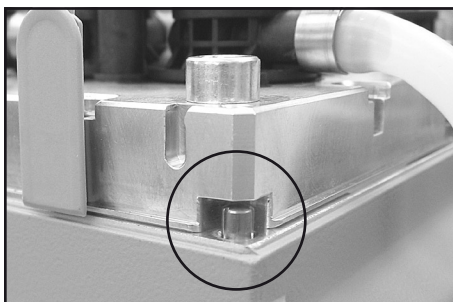


- ➔ Bring the diaphragms into a position in which they are in contact with the housing and centred with respect to the bore.
- ➔ Put on head cover with valve heads and connections.
- ☞ Pay attention to the correct orientation of the head covers:  
Housing with cylinder pin: The cylinder pin at the pump housing has to fit into the recess at the head cover.  
Housing with mark: Align the recess at the head cover with the mark at the pump housing.



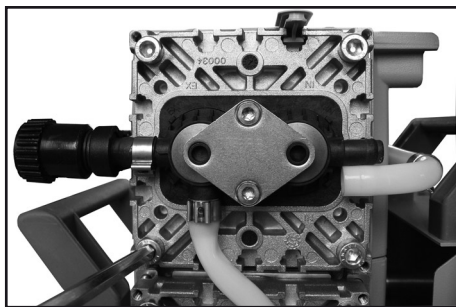

- ➔ Screw in the socket head screws at the head covers diagonally first slightly with a hex key size 5, then tighten.
- 🔧 Recommended torque: 12 Nm.
- ➔ Slot the blinds into the head cover.

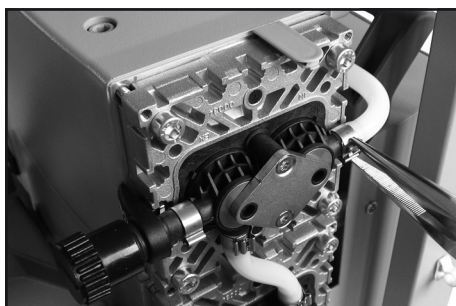


Fix the connection tube to the other side of the pump at the valve head.


**PC 3002/3003/3004 VARIO at inlet side:**

Fix the connection tube to the other side of the pump as well as the hose connection to the inlet/outlet of the pumping unit at the valve head.

- ➔ Slip connecting tube onto hose connection of valve head.
- ➔ Slide on the tube and the hose clip until touching the nose at the valve head.
- ➔ Close hose clip with flat pliers.

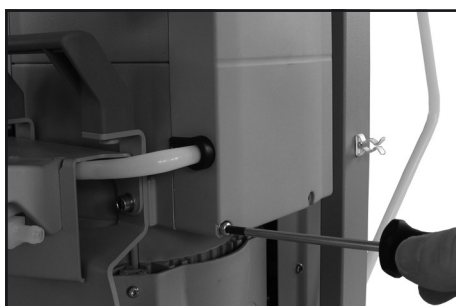

- ➔ Put head cover cowling on.
- ➔ Slide the head cover cowling in the grooves of the blinds and under the connection fasteners.
- ➔ Install the washers. Use a Torx screw driver TX20 to screw in the 4 screws fixating the head cover cowling.

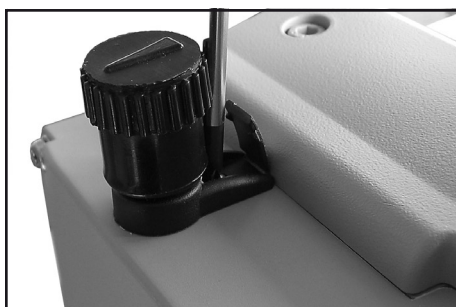

- ➔ Tighten the fillister head screws of the connection fasteners with a Torx screw driver TX20.
- ➔ Close the hinged covers.


**Replace diaphragms and valves of the opposite side of the pump in the same way!**



**PC 3002/3003/3004 VARIO:**

- ➔ Assemble catchpots with joint clips.

## Cleaning and inspecting the pump heads (pumps VARIO-B / PC 301x VARIO)

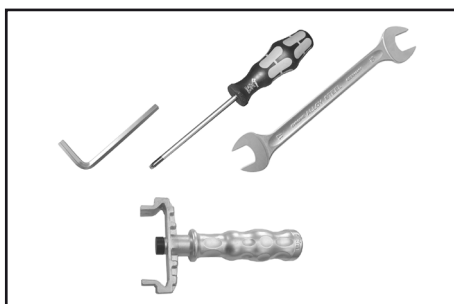


### Tools:

- Phillips screw driver size 2
- Open-ended wrench w/f 10/14/16/17
- Hex key size 5
- Diaphragm key w/f 66

### Disassembling the pump from the pumping unit (PC 3010/3012 VARIO)

- ➔ Disconnect controller from pump (VACUU•BUS cable).

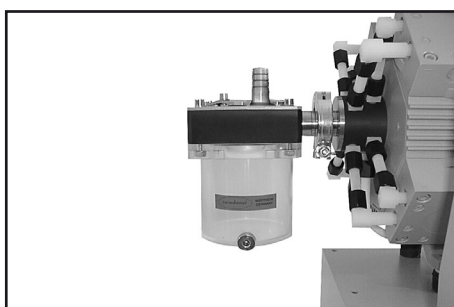

- ➔ Detach separator from pump inlet (open clamping ring).
- ⚠ Avoid the release of pollutants.
- ➔ Observe applicable regulations when disposing of condensate which may be contaminated by pumped chemicals.


- ➔ Disconnect hose connection between pump and exhaust waste vapour condenser. Loosen union nut at exhaust waste vapour condenser and pull hose out of the inlet of the condenser.
- ➔ Collecting flask at the outlet: Remove joint clip, remove flask and drain condensate. Observe applicable regulations when disposing of condensate which may be contaminated by pumped chemicals.

### Disassembling pump from base plate:

- ➔ Lay the pump on its side: the rating plate of the pump and the exhaust waste vapour condenser have to be on top, support pump suitably.
- ➔ Use open ended wrench (w/f 10) to remove hex nuts underneath the base plate from the feet of the pump (pay attention to serrated washers) and take off pump from base plate.




- ➔ Use an open-ended wrench (w/f) 17 to remove the union nuts of the hose connections at the pump heads.



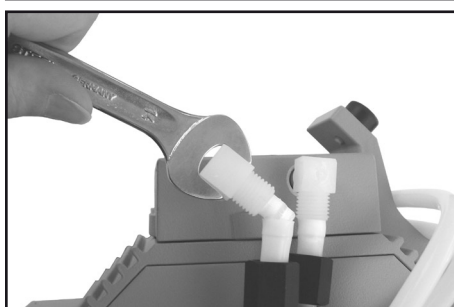


- ➔ Turn the fittings with an open-ended wrench (w/f 14, at outlet w/f 16) to detach the hoses from the pump heads.
- ⚠ Do not remove the elbow fittings from the pump heads. Through reassembly a leak may result.

## View of the disassembled pump head parts

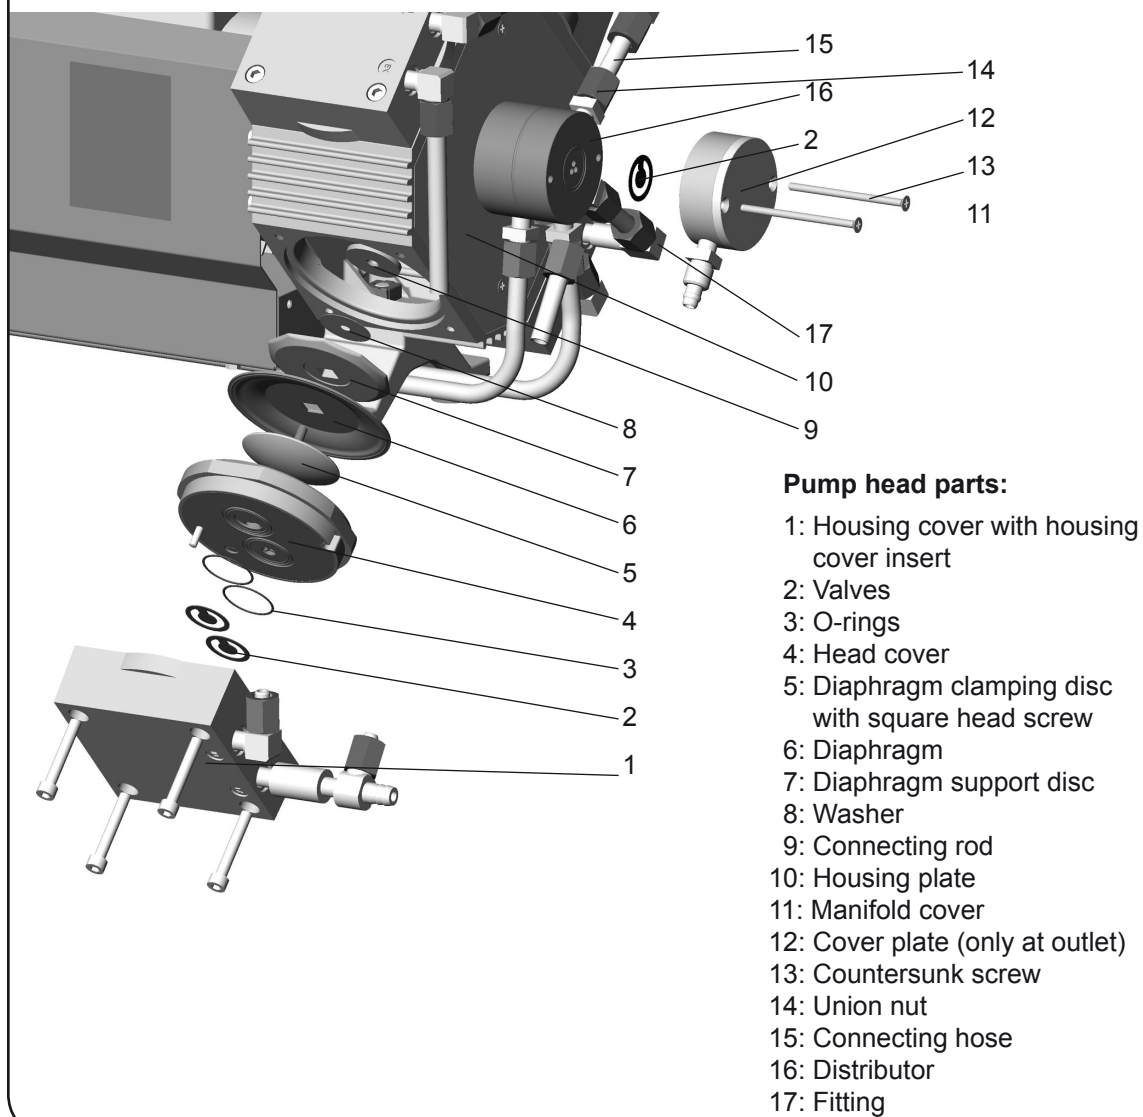




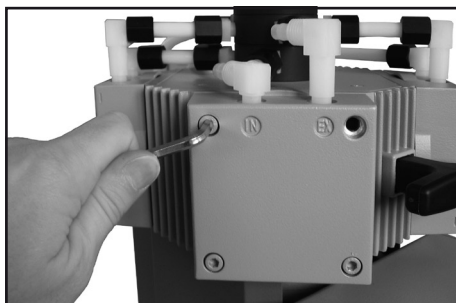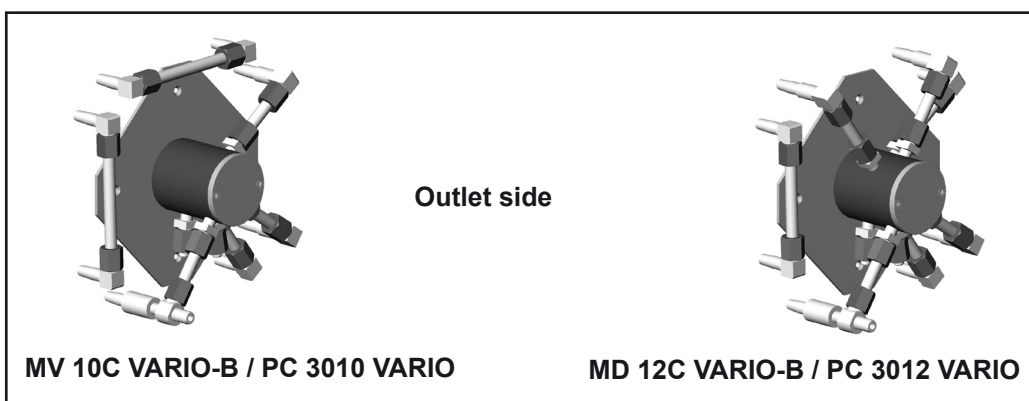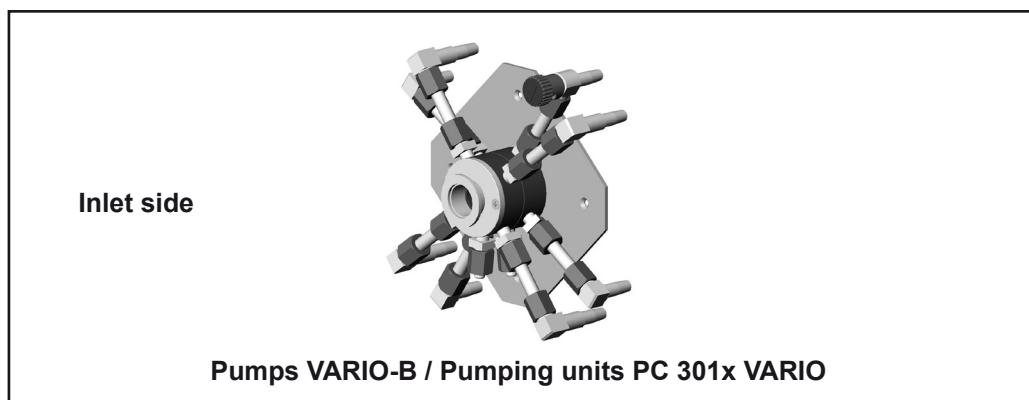


- ➔ To check the valves and the diaphragms use a hex key to remove four socket-head screws from the pump head and remove the upper part of the housing (housing cover with housing cover insert) together with the head cover, the valves and the O-rings.
- ⚠ Never remove parts by using a spiky or sharp-edged tool (e.g. screw driver), we recommend to use a rubber mallet or compressed air (to be blown carefully into port).
- ➔ Remove the head cover carefully from the upper part of the housing. Note the position of the valves and remove them.
- ⚠ Replace valves and/or O-rings if damaged.
- ⚠ Use petroleum ether or industrial solvent to remove deposits. Do not inhale.

## Replacing the diaphragm

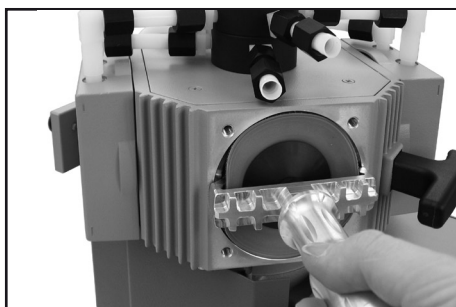


- ☞ Check diaphragm for damage and replace if necessary.
- ➔ Lift diaphragm carefully sidewise.
- ☞ Never use a spiky or sharp-edged tool to lift the diaphragm.
- ➔ Use the diaphragm key to grip the diaphragm support disc below the diaphragm.
- ➔ Unscrew diaphragm support disc with diaphragm and diaphragm clamping disc.

- ➔ Check for washers between the diaphragm support disc and the connecting rod. Do not mix the washers from the different pump heads. Make sure that the original number is reassembled at the individual pump head.
- ☞ If the old diaphragm is difficult to separate from the support disc, immerse assembly in naphtha or petroleum ether. Do not inhale!
- ☞ Too small number of washers: The pump will not attain ultimate vacuum. Too many washers: Clamping disc will hit head cover; noise or even blockade of the pump.

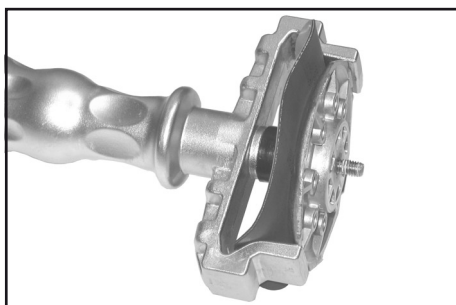


- ➔ Position new diaphragm between diaphragm clamping disc with square head screw and diaphragm support disc.
- ☞ **Attention:** Position diaphragm with pale side towards diaphragm clamping disc (to pump chamber).
- ☞ Make sure that the square head screw of the diaphragm clamping disc is correctly seated in the guide hole of the diaphragm support disc.
- ➔ Lift diaphragm at the side and position carefully together with diaphragm clamping disc and diaphragm support disc in the diaphragm key.
- ☞ Avoid damage of the diaphragm: Do not bend diaphragm too much.

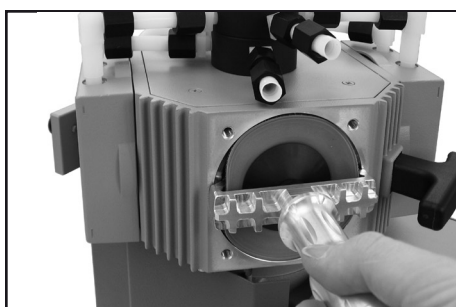

- ➔ Assemble the original number of washers between support disc and connecting rod.
- ➔ Screw diaphragm clamping disc, diaphragm, diaphragm support disc and washers to connecting rod.
- ☞ Optimum torque for the diaphragm support disc: 6 Nm, it is recommended to use a torque key. Attach hex key to diaphragm key (hexagonal bolt 6 mm wide).  
**Attention:** Never use the diaphragm key with any additional tools like tongs or hex keys without torque limitation.


## Assembling the pump heads

- ➔ Bring connecting rod into a position in which the diaphragm is in contact with the housing and centred with respect to the bore.

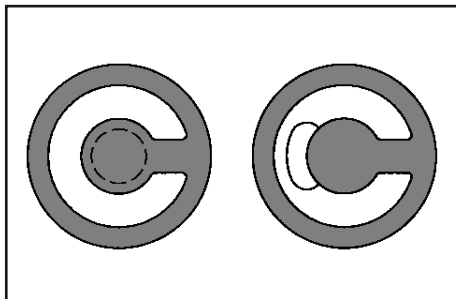

Reassemble in reverse order.

- ➔ Install head cover with O-rings, valves and housing cover with housing cover insert.
- ☞ Make sure that the valves are correctly seated: Valves at the outlet with round centred opening under valve, valves at the inlet with kidney-shaped opening beside valve.
- ☞ Pay attention that the diaphragm stays positioned centrally so that it will become clamped uniformly between housing and head cover.

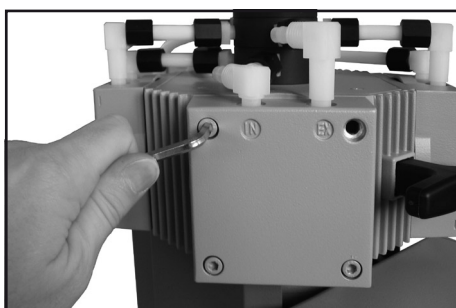

- ➔ Screw in four socket head screws fixing the housing cover crosswise first slightly, then tighten.
- ☞ Do not tighten until head cover is in contact with housing, torque 12 Nm.

### Individual performance check of a pump head:


By measuring the pressure at the inlet port of the individual head:

Use a suitable vacuum gauge (e. g. DVR 2, cat. no.: 682902), make sure that it is correctly calibrated, and measure the pressure at the inlet port. A vacuum of less than 120 mbar should be indicated.


- ☞ If the reading is higher, recheck the pump chamber and make sure that the valves and the diaphragms are correctly seated (diaphragms concentric with bore).

**Replace diaphragms and valves of the opposite side of the pump in the same way!**

### Replacing the valve at the distributor (outlet side)

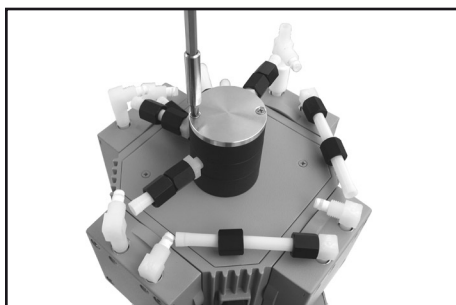


- ➔ Use open-ended wrench (w/f 17) to loosen the union nut of the hose, which runs directly to the cover plate of the distributor, at the pump head.
- ➔ Use open-ended wrench (w/f 15) to turn elbow fitting 1/4 of a turn, remove hose. Do not remove the elbow fitting from the pump head.
- ➔ Unscrew the two countersunk head screws at the manifold cover with an Phillips screw driver and remove cover plate and manifold cover.

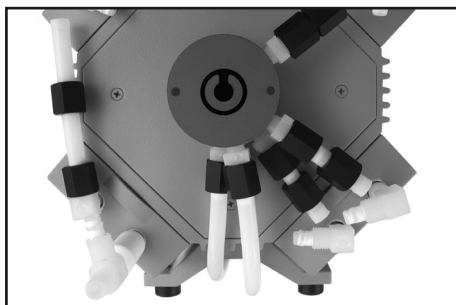

- ➔ Note position of valve and remove.
- ☞ Check valve for damage and replace if necessary. Make sure that the valve is correctly seated.
- ➔ Reassemble manifold cover and cover plate and fixate with countersunk screws.

### Notes on assembling fittings and hose connections (only MV 10C VARIO-B, PC 3010 VARIO)

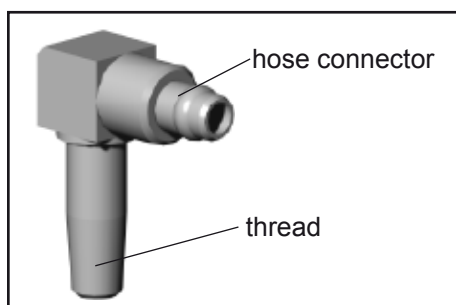


The thread of the fittings at the pump heads, at the inlet and outlet distributors as well as the hose connectors are sealed with PTFE bond.

If the fittings or the hoses have been removed, use new PTFE bond (included in set of seals) when reassembling.

Wind the thread of the fitting two times counterclockwise with PTFE bond, the hose connectors three times. Ensure that the PTFE bond ends flush with the fittings.

### Assembling the connecting hoses

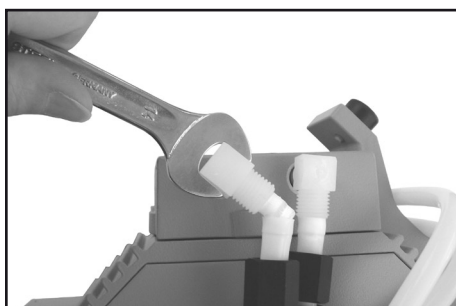

- ➔ Use an open-ended wrench w/f 14 (w/f 16 at outlet) to slip the hoses onto the hose connectors by turning the fittings.



- ➔ Tighten the union nuts of the hose connections at the pump heads with an open-ended wrench w/f 17.
- ☞ Tighten union nuts first by hand and then tighten one full turn using the open ended wrench.

## Reassembling the pump at the pumping units PC 3010/3012 VARIO:

- ➔ Lay the pump on its side: the rating plate of the pump has to be on top (support pump suitably).
- ☞ Note that to install the console, the exhaust waste vapour condenser and the condensate flask must be on top.
- ➔ Push the console over the threads at the pump feet.
- ➔ Install the serrated washers. Install the hex nuts and tighten using open-ended wrench (w/f 10). Place pumping unit in normal operating position.
- ➔ Attach the connecting hose between the pump and the exhaust waste vapour condenser at the inlet of the condenser. Connect exhaust waste vapour condenser to the coolant circuit. Plug in VACUU•BUS cable at controller.

### If the pump does not achieve the ultimate vacuum:

- ☞ In case the diaphragms and valves have been replaced, a run-in period of several hours is required before the pump achieves its ultimate vacuum.
- ☞ In case of unusual noise switch off pump immediately and check clamping disc positions.

If the specified ultimate vacuum is not achieved and if this does not change after the run-in period:


Check hose connectors at pump head for leaks. If necessary recheck valve seats and pump chambers.

## Replacing the overpressure safety relief device at the exhaust waste vapour condenser:

- ➔ Remove the red union nut at the condenser. Remove hose from the inlet of the condenser.
- ➔ Pull off old overpressure safety relief device and install new one.
- ➔ Connect hose to the inlet of the exhaust waste vapour condenser and tighten union nut.

**Overpressure safety relief device** at exhaust waste vapour condenser .....**638821**

## Replacing the device fuse

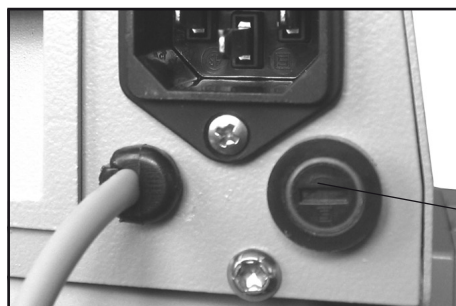


Pumps NT VARIO / PC 300x VARIO



Pumps VARIO-B / PC 301x VARIO

fuse holder

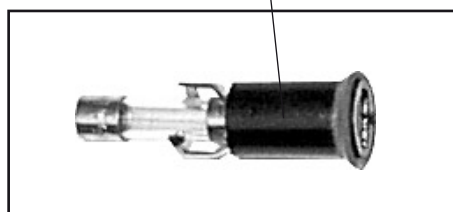

- Unscrew the fuse holder using a screw driver.
- Replace the defective fuse by a fuse of the same type (see "Technical data") and reassemble holder with fuse to the pump.

## Notes on return to the factory

### Repair - return - DKD calibration

#### NOTICE

Safety and health of our staff, laws and regulations regarding the handling of dangerous goods, occupational health and safety regulations and regulations regarding safe disposal of waste require that for all pumps and other products the **“Health and safety clearance form”** must be sent to our office duly completed and signed before any equipment is dispatched to our premises.

Fax or post a completed copy of the health and safety clearance form to us in advance. The declaration must arrive before the equipment. Enclose a second completed copy with the product. If the equipment is contaminated you must notify the carrier.

**No repair / DKD calibration is possible unless the correctly completed form is returned. Inevitably, there will be a delay in processing the equipment if information is missing or if this procedure is not obeyed.**

#### CAUTION

If the product has come in contact with chemicals, radioactive substances or other substances dangerous to health or environment, the product must be decontaminated **prior to sending it back to the factory.**

- Return the product to us **disassembled and cleaned** and accompanied by a certificate verifying decontamination or
- Contact an industrial cleaning and **decontamination service** directly or
- Authorize us to send the product to an industrial cleaning facility **at your expense.**

To expedite repair and to reduce costs, please enclose a detailed description of the problem and the product's operating conditions with every product returned for repair.

We submit **quotations** only on request and always at the customer's expense. If an order is given, the costs incurred are offset from the costs for repair or from the purchase price, if the customer prefers to buy a new product instead of repairing the defective one.

- **If you do not wish a repair on the basis of our quotation, the equipment might be returned to you disassembled and at your charge!**

In many cases, the **components must be cleaned in the factory** prior to repair. For cleaning we use an environmentally responsible water based process. Unfortunately the combined attack of elevated temperature, cleaning agent, ultrasonic treatment and mechanical stress (from pressurised water) may result in damage to the paint. Please mark in the health and safety clearance form if you wish a **repaint at your expense** just in case such a damage should occur.

We also replace parts due to optical aspects upon your request.

#### NOTICE

**Before returning** the equipment ensure that (if applicable):

- Equipment has been cleaned and/or decontaminated.
- All inlet and outlet ports have been sealed.
- Equipment has been properly packed, if necessary, please order an original packaging (costs will be charged), marked as appropriate and the carrier has been notified.
- Ensure that the completed health and safety declaration is enclosed.

We hope for your understanding for these measures, which are beyond our control.

#### Scraping and waste disposal:

Dispose of the equipment and any components removed from it safely in accordance with all local and national safety and environmental requirements. Particular care must be taken with components and waste oil which have been contaminated with dangerous substances from the process. Do not incinerate fluoroelastomer seals and O-rings.

- You may authorize us to dispose of the equipment **at your expense.**



# Health and safety clearance form

## Declaration concerning safety, potential hazards and safe disposal of waste, e. g. used oil.

Safety and health of our staff, laws and regulations regarding the handling of dangerous goods, occupational health and safety regulations, safety at work laws and regulations regarding safe disposal of waste, e. g. waste oil, require that for all pumps and other products this form must be sent to our office duly completed and signed before any equipment is dispatched to our premises. **Products will not be accepted for any procedure, and handling and repair / DKD calibration will not start before we have received this declaration.**

- a) Fax or post a **completed copy of this form** to us in advance. The declaration must arrive before the equipment. **Enclose a second, completed copy with the product.** If the product is contaminated you must notify the carrier (**GGVE, GGVS, RID, ADR**).
- b) Inevitably, the repair process will be delayed considerably, if this information is missing or this procedure is not obeyed. We hope for your understanding for these measures which are beyond our control and that you will assist us in expediting the repair procedure.
- c) **Make sure that you know all about the substances which have been in contact with the equipment and that all questions have been answered correctly and in detail.**

<p><b>1. Product (Model):</b> .....</p> <p><b>2. Serial No.:</b> .....</p> <p><b>3. List of substances in contact with the equipment or reaction products:</b></p> <p><b>3.1 Chemical/substance name, chemical symbol:</b></p> <p>a) .....</p> <p>b) .....</p> <p>c) .....</p> <p>d) .....</p> <p><b>3.2 Important information and precautions, e. g. danger classification:</b></p> <p>a) .....</p> <p>b) .....</p> <p>c) .....</p> <p>d) .....</p> <p><b>4. Declaration (please mark as applicable):</b></p> <p><input type="checkbox"/> <b>4.1 for non dangerous goods:</b>                  We assure for the returned product that                  - neither toxic, corrosive, biologically active, explosive, radioactive nor contamination dangerous in any way has occurred.                  - the product is free of dangerous substances.                  - the oil or residues of pumped media have been drained.</p> <p><input type="checkbox"/> <b>4.2 for dangerous goods:</b>                  We assure for the returned product that                  - all substances, toxic, corrosive, biologically active, explosive, radioactive or dangerous in any way which have been pumped or been in contact with the product are listed in 3.1, that the information is complete and that we have not withheld any information.                  - the product, in accordance with regulations, has been  <input type="checkbox"/> cleaned   <input type="checkbox"/> decontaminated   <input type="checkbox"/> sterilized.</p>	<p><b>5. Way of transport / carrier:</b>                  .....</p> <p>Day of dispatch to VACUUBRAND:                  .....</p> <p><b>If the paint is damaged, we wish a repaint or a replacement of parts due to optical aspects at our expense (see "Notes on return to the factory"):</b>  <input type="checkbox"/> yes  <input type="checkbox"/> no</p> <p><b>We declare that the following measures - where applicable - have been taken:</b>                  - The oil has been drained from the product.  <b>Important: Dispose of according to national regulations.</b>                  - The interior of the product has been cleaned.                  - All inlet and outlet ports of the product have been sealed.                  - The product has been properly packed, if necessary, please order an original packaging (costs will be charged), and marked as appropriate.                  - The carrier has been informed about the hazardous nature of the goods (if applicable).</p> <p><b>We assure VACUUBRAND</b> that we accept liability for any damage caused by providing incomplete or incorrect information and that we shall indemnify VACUUBRAND from any claims as regards damages from third parties.</p> <p><b>We are aware</b> that as expressed in § 823 BGB (Public Law Code of Germany) we are directly liable for injuries or damages suffered by third parties, particularly VACUUBRAND employees occupied with handling/repairing the product.</p> <p>Signature: .....</p> <p>Name (print): .....</p> <p>Job title (print): .....</p> <p>Company's seal: .....</p> <p>Date: .....</p>
---	---





**Konformitätserklärung  
Declaration of conformity  
Déclaration de conformité**

**Pumpstand / Pumping unit / Groupe de pompage**

**PC 3002 VARIO o.C. (230V; 733514)**

**PC 3004 VARIO o.C. (230V; 737514)**

Hiermit erklären wir, dass das oben bezeichnete Gerät in Konzeption und Bauart sowie in der von uns in Verkehr gebrachten Ausführung den grundlegenden Anforderungen der zutreffenden, aufgeführten EU-Richtlinien entspricht. Bei einer mit uns nicht abgestimmten Änderung an dem Gerät verliert diese Erklärung ihre Gültigkeit.

We herewith declare that the product designated above is in compliance with the basic requirements of the applicable EC-directives stated below with regard to design, type and model sold by us. This certificate ceases to be valid if the product is modified without the agreement of the manufacturer.

Par la présente, nous déclarons que le dispositif désigné ci-dessus est conforme aux prescriptions de base des directives EU applicables et indiqués en ci que concerne conception, dessin et modèle vendu par nous-mêmes. Cette déclaration cesse d'être valable si des modifications sont apportées au dispositif sans notre autorisation préalable.

Maschinenrichtlinie (mit Änderungen) / Machine directive (with supplements) / Directive Machines (avec des suppléments)

2006/42/EG

Niederspannungsrichtlinie / Low-Voltage Directive / Directive Basse Tension

2006/95/EG

Richtlinie Elektromagnetische Verträglichkeit / Electromagnetic Compatibility Directive / Directive Compatibilité Electromagnétique

2004/108/EG

Angewandte Harmonisierte Normen / Harmonized Standards applied / Normes Harmonisées utilisées

DIN EN 12100-2, DIN EN 61010-1, DIN EN 1012-2

DIN EN 61326-1: 230V: Klasse / class / classe A + B // 120V: Klasse / class / classe A

Managementsysteme / Management systems / Systèmes de Management

EN ISO 9001, EN ISO 14001 (1997-2006)

Wertheim, 04.06.2008

.....  
Ort, Datum / place, date / lieu, date

(Dr. F. Gitmans)

Geschäftsführer / Managing director / Gérant

ppa.

(Dr. J. Dirscherl)

Technischer Leiter / Technical Director / Directeur technique

**VACUUBRAND GMBH + CO KG**

-Vakuumtechnik im System-

-Technology for Vacuum Systems-

-Technologie pour système à vide-

Alfred-Zippe-Str. 4 - 97877 Wertheim

Tel.: +49 9342 808-0 - Fax: +49 9342 808-450

E-Mail: [info@vacuubrand.de](mailto:info@vacuubrand.de)

Web: [www.vacuubrand.de](http://www.vacuubrand.de)

<sup>th</sup>

Disclaimer: Our technical literature is only intended to inform our customer. The validity of general empirical values and results obtained under test conditions for specific applications depend on a number of factors beyond our control. It is therefore strictly the users' responsibility to very carefully check the validity of application to their specific requirements. No claims arising from the information provided in this literature will, consequently, be entertained.

**VACUUBRAND GMBH + CO KG****-Technology for Vacuum Systems-**

© 2009 VACUUBRAND GMBH + CO KG Printed in Germany

Alfred-Zippe-Str. 4 - 97877 Wertheim  
Tel.: +49 9342 808-0 - Fax: +49 9342 808-450E-Mail: [info@vacuubrand.de](mailto:info@vacuubrand.de) - Web: [www.vacuubrand.de](http://www.vacuubrand.de)